

Handleiding DELTA® plaatklemmen

De hijscapaciteit en de bekopening van de DELTA® plaatklem moet overeenkomen met het te hijsen object. De DELTA® plaatklem moet altijd zorgvuldig gemonteerd worden aan het te hijsen object.

De getande aandrukplaat van de DELTA® horizontale plaatklem moet altijd tegen de bovenkant van het te hijsen object drukken. Dus de aandrukplaat drukt naar beneden.

Controleer dat de aandrukplaat van de DELTA® horizontaal plaatklem tegen de plaat aandrukt. Het is verboden met geopende bek te hijsen.

De DELTA® universeel plaatklem heeft een veiligheids slot hevel dat er voor zorgt dat de aandrukplaat ten alle tijden geblokkeerd wordt.

Controleer of deze geblokkeerd staat voor gebruik!!

Na gebruik wordt de veiligheids hevel terug geduwd waardoor de DELTA® universeel plaatklem los komt van het gehesen object.

De aandrukplaat van de DELTA® verticaal plaatklem wordt gezeurd door middel van een veer.

Controleer of deze geblokkeerd staat voordat U gaat hijsen.

WAARSCHUWING:

Indien U niet zeker bent van een veilige hijs situatie neem contact op met uw DELTA® verdeler

~~Handleiding~~

DELTA® plate clamps

Instructions

The lifting capacity and the width of grip of the DELTA® lifting clamps must be adapted to the concerned hoisting tasks. The DELTA® lifting clamps must always be carefully attached to the load.

For lifting horizontally plates, the DELTA® clamp part with the tooth-shaped cam is placed on the top of the plate, so that the cam presses downwards.

The DELTA® universal clamp has a security lock ensuring that the cam with its locking springs is pressed against the plate to be lifted, even if there is no pull on the DELTA® clamp. After the lifting operation the clamp is released (the locking spring turned off) by pulling the safety handle or ring back. By turning the handle to the "on" position (spring loading). Take care that the safety handle is on, before the transport starts.

It's very important that the spring-loaded cams on the DELTA® horizontal clamp are pressed against the plate before lifting. It is forbidden to lift while open. The working parts must be able to move freely.


The parts exposed to abrasion, especially the tempered cams and anchor plates, have to be renewed periodically. Beware of dentition.

When ordering spare parts, please state type and part number (Please see the figures below):

Note: Please contact your Delta® distributor when in doubt with the safety instruction.

22 plsh 1003
onderdelen

1: Explosie tekening DELTA universeel plaatklem

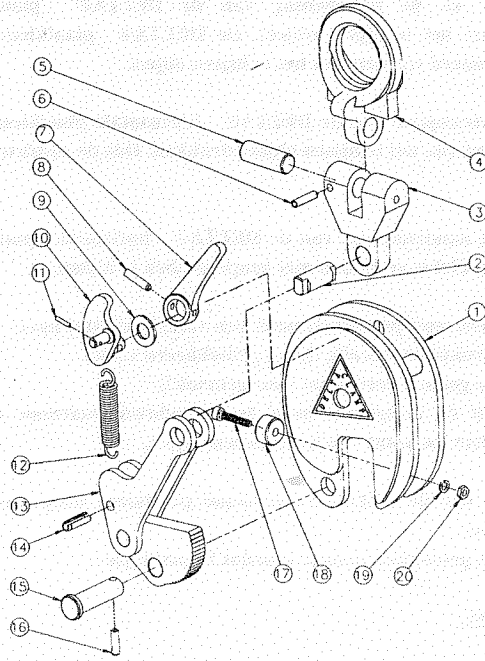

No.	Onderdeel
1	Huis
2	As
3	Gaffel
4	Ophangring
5	As
6	Borg pen
7	Vergrendel pal
8	Borg pen
9	Ring
10	Slot

11	Borg pen
12	Veer
13	Vergrendelplaat
14	Borg pen
15	As
16	Borg pen
17	Bout
18	Taats
19	Ring
20	Moer

2

No.	Parts Name
12	Spring
13	Connecting rod assy.
14	Spring pin for connecting rod
15	Can shaft
16	Spring pin for can shaft
17	Inner hexagon screw
18	Coil
19	Spring washer
20	Hexagon locked nut

No.	Parts Name
1	Clamp assy.
2	Connecting pin
3	Connecting seat
4	Hangring
5	Fixed shaft for hangring
6	Spring pin for connecting seat
7	Control lever
8	Spring pin for control lever
9	Washer
10	Locked block
11	Spring pin for locked block

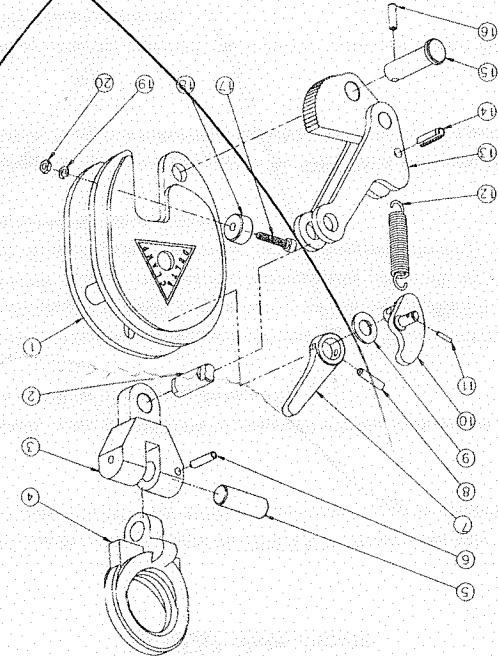


Figure 1: Exploded view of DELTA universal plate clamp

No.	1	As
	2	Veer
	3	Aandruk plaat
	4	Veer
	5	Borg pen
	6	Huis


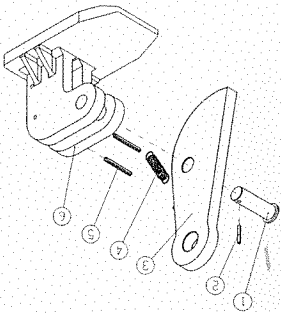



Figure3: Explosie tekening DELTA horizontaal plaat klem 1,5T/2,5T/5T

No.	1	Onderdeel
	2	Veer
	3	Aandruk plaat
	4	Borg pen
	5	Huis

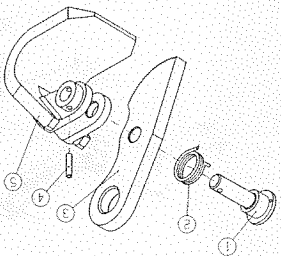


2: Explosie tekening DELTA horizontaal plaat klem 750 Kg

Figure 2: Exploded view of DELTA horizontal plate clamp 750 Kg

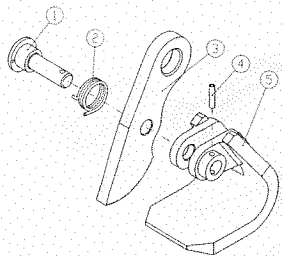


No.	Parts Name
1	Shaft
2	Spring
3	Tooth plate with lifting eye
4	Spring pin
5	Clamp seat

Figure 3: Exploded view of DELTA horizontal plate clamp 1,5T/2,5T/5T

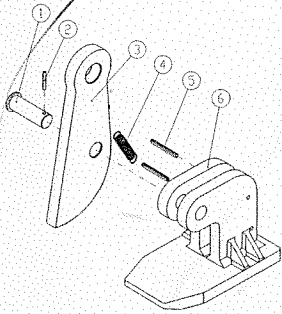

No.	Parts Name
1	Shaft
2	Spring pin
3	Tooth plate with lifting eye
4	Spring
5	Spring pin
6	Clamp seat

4: Exploded view of DELTA vertical plate clamp

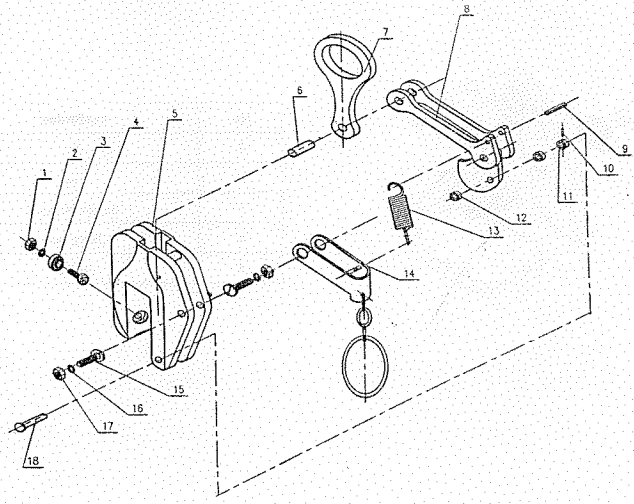

No.	Onderdeel
1	Moer
2	Ring
3	Taats
4	Bout
5	Huis
6	Borg pen
7	Ophang ring
8	Aandruk plaat
9	Pen
10	Pen
11	Bus
12	Ring
13	Veer
14	Beugel
15	Bout
16	Ring
17	Moet
18	As

No.	Parts Name
1	Nut
2	Washer
3	Collar
4	Screw
5	Body
6	Ring pin
7	Suspend ring
8	Connect shank
9	Snap pin
10	Snap pin
11	Fix pipe
12	Sleeve
13	Pulling spring
14	Shackle
15	Screw
16	Washer
17	Nut
18	Cam shaft

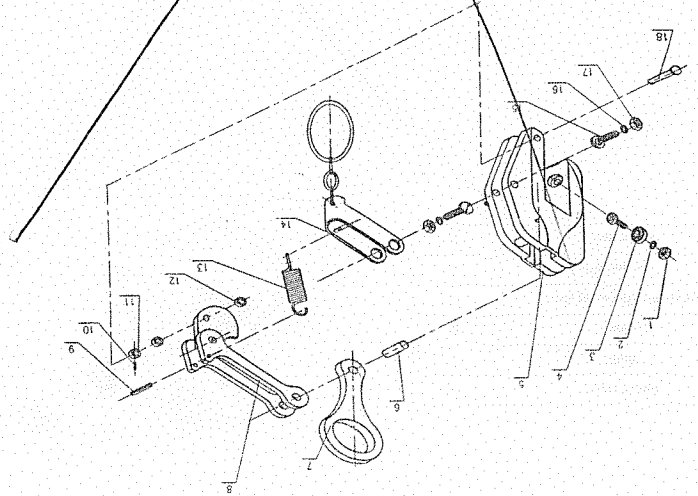


Figure 4: Exploded view of DELTA vertical plate clamp