


DYNAPAC

LG200

SPARE PARTS

CATALOGUE

SLG200-2EN3

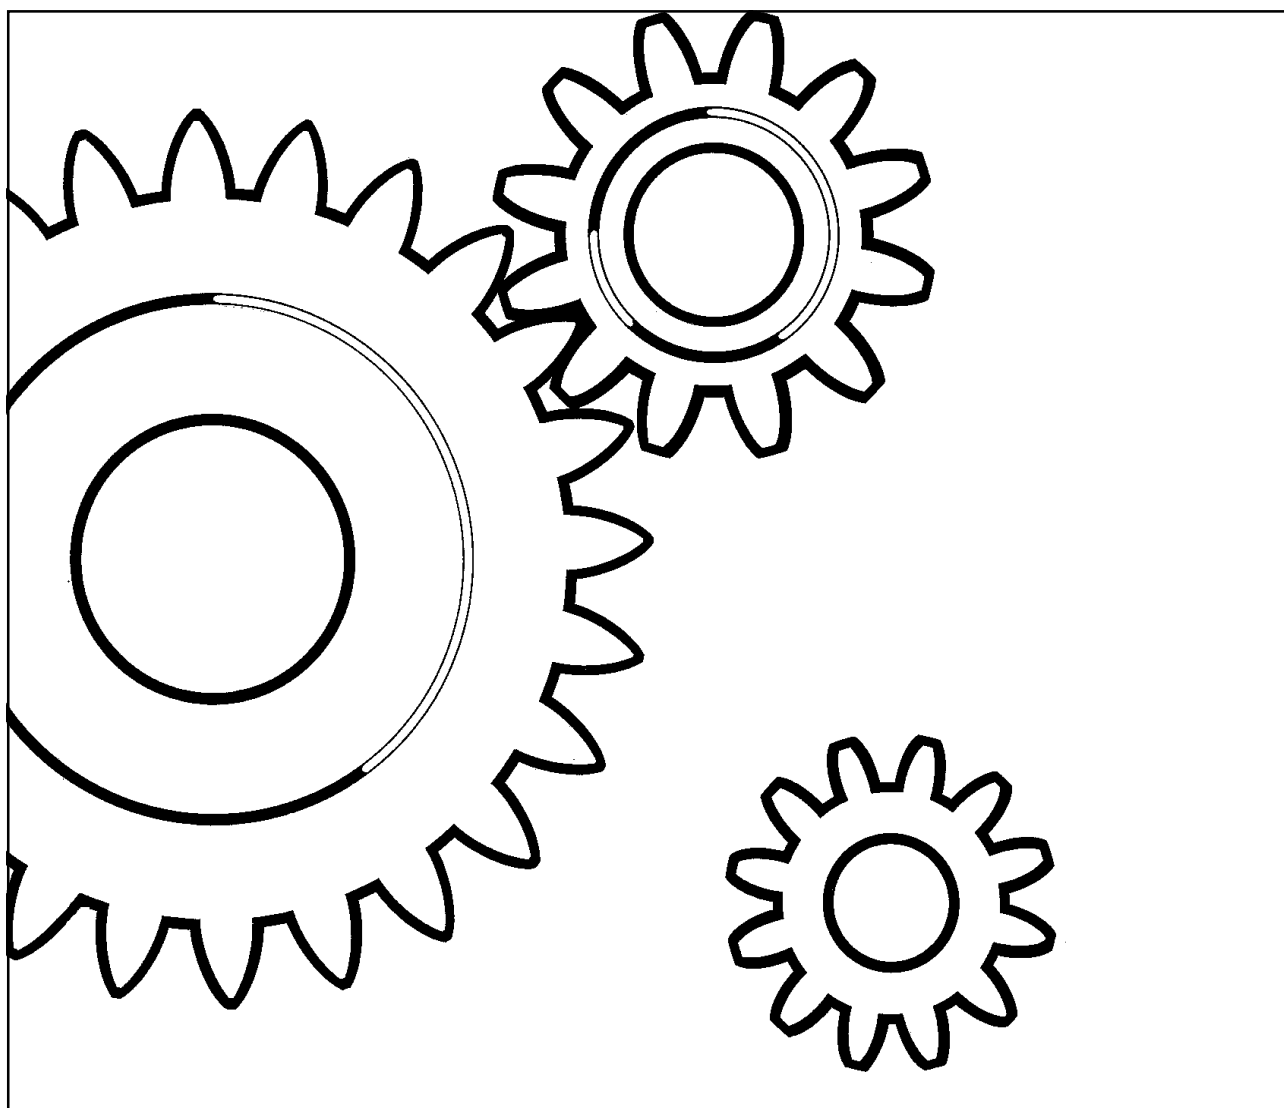

DYNAPAC

Part of the Atlas Copco Group

Box 504, SE-371 23 Karlskrona, Sweden

Phone: +46 455 30 60 00, Fax: +46 455 30 60 10

www.dynapac.com

Forward/Reverse Vibratory Plate Compactor LG200

Spare Parts Catalogue

SLG200-2EN3

Valid from serial number:

32003300-

Engines:

Honda GX200

Hatz 1B20

Published catalogue issues valid for these trench compactors:

<i>Catalogue</i>	<i>Issue date</i>	<i>Replaced by</i>
SLG200-2EN1	2004 - 01	SLG200-2EN2
SLG200-2EN2	2005 - 04	SLG200-2EN3
SLG200-2EN3	2008 - 09	



RESERVDELSBESTÄLLNING

Följande uppgifter ska lämnas vid beställning av reservdelar för att undvika leveransfel:

1. Maskintyp.
2. Vältens serienummer.
3. Antal av önskad reservdel.
4. Reserdelens artikelnummer.
5. Reservdelens benämning.
6. Måttuppgifter vid beställning av metervara.

ORDERING SPARE PARTS

To avoid errors in delivery, please give the following information when ordering spare parts:

1. Type of machine.
2. Roller serial number.
3. Quantity required.
4. Part number.
5. Parts denomination.
6. Dimensions when ordering per length.

ERSATZTEILBESTELLUNG

Zur Vermeidung von Fehllieferungen sind bei der Bestellung von Ersatzteilen folgende Angaben zu machen:

1. Maschinentyp.
2. Herstellungsnummer.
3. Bestellmenge. (Quantity)
4. Ersatzteilnummer. (Part N°)
5. Ersatzteilbenennung. (Denomination)
6. Massangaben bei Bestellung von Meterware.

ORDINI DI RICAMBI

Per evitare errori nelle consegne di ricambi, Vi preghiamo di comunicarci le seguenti informazioni al momento dell'ordinazione:

1. Tipo di macchina.
2. Numero di serie della macchina.
3. Quantità dei pezzi desiderati. (Quantity)
4. Numero di codice del pezzo. (Part N°)
5. Descrizione del pezzo di ricambio. (Denomination)
6. Misura, in caso di ordine per metro.

PEDIDO DE RECAMBIOS

Para evitar errores en las entregas, deberán indicarse los siguientes datos al hacer un pedido de recambios:

1. Tipo de máquina.
2. Número de serie.
3. Cantidad de piezas deseadas. (Quantity)
4. Número de artículo de la pieza de recambio. (Part N°)
5. Denominación de la pieza. (Denomination)
6. Indíquese la medida al solicitar un artículo que se expide por metros.

COMMANDE DE PIÉCES DE RECHANGE

Les indications suivantes doivent être fournies lors de la commande de pièces de rechange, afin d'éviter toute erreur de livraison:

1. Type de machine.
2. Numéro de série.
3. Quantité désirée de pièce de rechange. (Quantity)
4. Numéro de la pièce de rechange. (Part N°)
5. Dénomination de la pièce de rechange. (Denomination)
6. Longueur en cas de commande au mètre.

YOUR AGENT/DEALER:

DYNAPAC

Text pages

The text pages is structured as the picture on the right.

1. This is the remarks for specific items and the descriptions of the remarks is at the bottom of the parts list.
2. Parts indicated by a dot and moved to the right are included when buying the assembled unit above.
3. Spare parts and service code for a specific part, mainly for internal use at Dynapac. "A" = Service part, "B" = Fast moving part, "C" = Suggested exchanged part and "D" = Regular spare part.

DYNAPAC					Metso Dynapac AB	
Cooling system						
Ref. No.	Part No.	Rem.	Qty	Description	Code	
1	223047		1	Water cooler	③	C
2	935852		1	Radiator cap		D
3	935851	①	1	Cock		
4	373263	A	1	Radiator hose		D
5	313009		6	Clamp		
6	205058	B	1XL	Rubber clotch		
7	373261	C	1	Radiator hose		D
8			1	Oil cooler		D
9	223289		1	Plate		
10	902166	D	1XL	Edge trim		
11	223287	E	1	Holder		
12	223288	F	1	Holder		
13	908168		1	Fan guard		
14	908170		1	Fan shroud		
15	908171		2	Mounting bar		
16	908169		1	Fan guard		
17	500021		14	Screw		
18	902286		14	Nut		
19	600006		14	Washer		
20	313102		2	Cable strap		

A) Upper
 B) L=060MM
 C) Lower
 D) L=2280MM
 E) Left
 F) Right

Changes

PARTS INFO	SERVICE INFO	GROUP	PAGE	NOTES

Notes

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

PÄRMETIKETT

För att undvika fel vid reservdelsbeställning finns här nedan två etiketter som passar i fickorna på pärmarnas ryggar. På dessa kan man se från vilket vältnummer av aktuell maskin reservdelskatalogen gäller. Gör så här:

1. Tag denna sida ur pärm.
2. Klipp ut etiketten till **VÄNSTER** (1) och sätt in den i fickan på **DENNA** pärmens rygg.
3. Finns det en etikett till **HÖGER** (2), kan denna användas på pärmerna för **FÖREGÅENDE** utgåva av denna katalog.
4. Kasta detta papper.

KATALOG-BESCHRIFTUNG

Zur Vermeidung von Fehlern bei der Ersatzteilbestellung benutzen Sie bitte die unteren Beschriftungen, um die Kataloge auf der Rückseite zu kennzeichnen. Auf der Beschriftung ist angegeben, für welche Maschinennummern der jeweilige Katalog gültig ist. Ablauf:

1. Nehmen Sie dieses Blatt aus dem Katalog.
2. Schneiden Sie die **LINKE** Beschriftung (1) aus. Schieben Sie die Beschriftung in die tasche auf **DEM** Katalogrücke.
3. Sollte die Beschriftung unten **RECHTS** (2) mitgeliefert werden, kennzeichnen Sie damit bitte die **ÄLTERE** Ausführung dieses Kataloges.
4. Den Rest dieses Blattes bitte vernichten.

ETIQUETA PARA LA CARPETA

Para evitar errores al pedir repuestos utilicen las etiquetas abajo descritas para identificar los catálogos en la parte trasera de la carpeta. En la etiqueta se ven los números de referencia de la serie para la cual es válido el catálogo. Instrucciones:

1. Quitar esta página de la carpeta.
2. Corta la etiqueta **IZQUIERDA** (1) y ponerla en **ESTA** carpeta en la parte trasera.
3. Si hay una etiqueta en la parte **DERECHA** (2) se puede utilizar en la carpeta para el catálogo que **PRECEDE** a esta.
4. Tirar esta hoja.

BINDER LABEL

To avoid errors when ordering spare parts use the labels below to identify the catalogues on the back of the binder. The label contain the serial number range for which the catalogue is valid. Do like this:

1. Remove this page from the binder.
2. Cut out the **LEFT** label (1) and put it on **THIS** binders back.
3. If there is a label to the **RIGHT** (2), it can be used on the binder for **PRECEDING** issue of this catalogue.
4. Throw away this paper.

ETICHETTAPOSTASULRACCOGLITORE

Per evitare errori quando ordinate pezzi di ricambio, usate le etichette in calce che servono ad identificare i cataloghi sul retro del raccoglitore. L'etichetta indica il numero di matricola delle macchine prese in considerazione nel catalogo.

1. Rimuovete questa pagina dal raccoglitore.
2. Ritagliate l'etichetta posta a **SINISTRA** (1) e ponetela sul retro **DEL** raccoglitore.
3. Se trovate anche un'etichetta sulla **DESTRA** (2), ritagliatela e ponetela sul raccoglitore relativo alla **PRECEDENTE** edizione del catalogo.
4. Distruggete questo foglio.

ETIQUETAGE DU CATALOGUE


Afin d'éviter des erreurs lors de commandes de pièces de rechange, nous vous conseillons d'apposer les marquages ci-dessous à l'arrière du classeur, pour identifier les catalogues. Ce marquage indique les numéros de série pour lesquels le catalogue est adapté. Il convient de procéder de la façon suivante:

1. Retirez cette page du classeur.
2. Découpez l'étiquette de **GAUCHE** (1), et apposez-la à l'arrière de **CE** catalogue.
3. Si il y a une étiquette à **DROITE** (2), vous pourrez l'apposer sur le classeur de l'édition **PRECEDENTE** du catalogue.
4. Détruire cette feuille.

1.



LG200 SN 32003300-	2
Ground plate, engine plate and frame	4
Ground plate, engine plate and frame	6
Option, transport device	8
Transport device New version	10
Eccentric element	12
Eccentric element	14
Engine and engine installation	16
Engine Honda GX200	18
Engine Hatz 1B20	20
Engine installation, Honda	24
Engine installation, Hatz	26
Power transmission	28
Power transmission, Honda	30
Power transmission, Hatz Up to S/N: 32003323	32
Power transmission, Hatz From S/N: 32003324	34
Hydraulic system	36
Hydraulic system Up to SN 32003355	38
Hydraulic oil tank	40
Hydraulic system From SN 32003356	42
Hydraulic oil tank	44
Electrical equipment	46
Electrical equipment Up to S/N: 32003725	48
Electrical equipment From S/N: 32003726 to 32005344	50
Electrical equipment From S/N: 32003745 to 32006934	52
Electrical equipment From S/N: 32006935	54
Handle and throttle control	56
Handle and throttle control, Honda	58
Handle and throttle control, Hatz	60
Decals and documentation	62
Decals and documentation	64

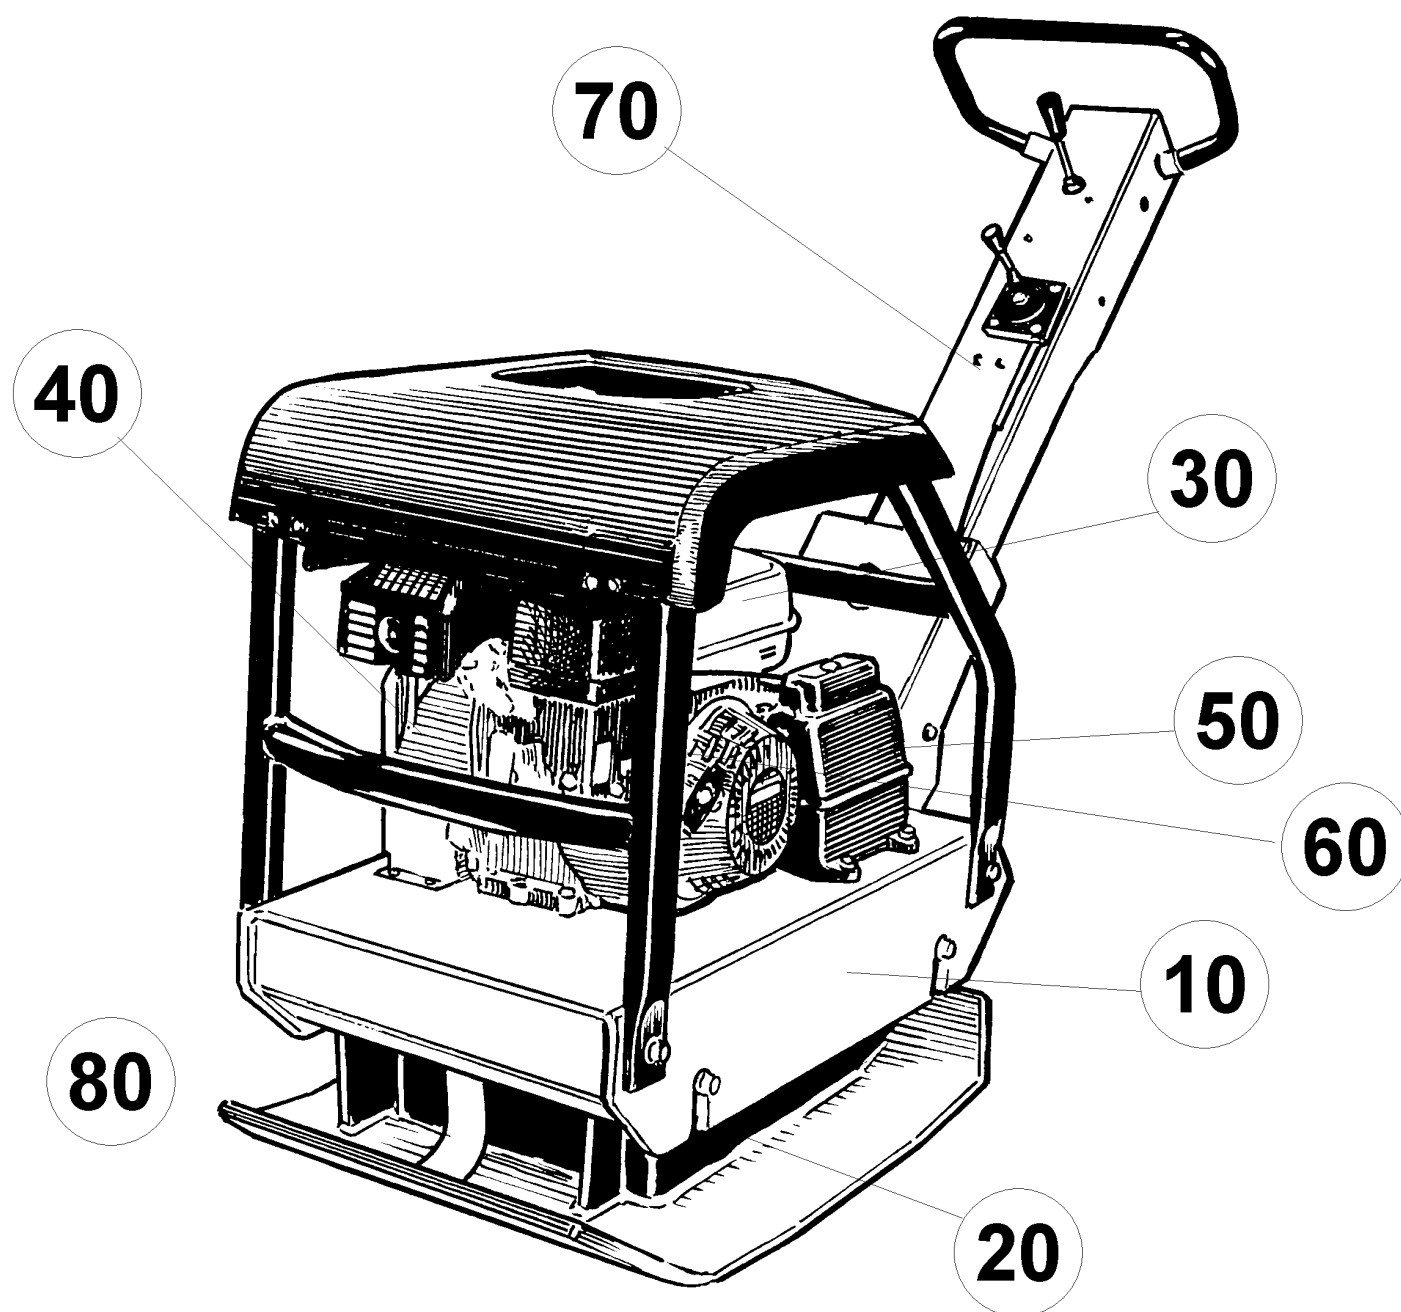


Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Ground plate, engine plate and frame (Page 4)	
20				Eccentric element (Page 12)	
30				Engine and engine installation (Page 16)	
40				Power transmission (Page 28)	
50				Hydraulic system (Page 36)	
60				Electrical equipment (Page 46)	
70				Handle and throttle control (Page 56)	
80				Decals and documentation (Page 62)	
81			1		

Ground plate, engine plate and frame

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Ground plate, engine plate and frame (Page 6)	
20				Option, transport device (Page 8)	
30				Transport device (Page 10)	New version

Ground plate, engine plate and frame

17958

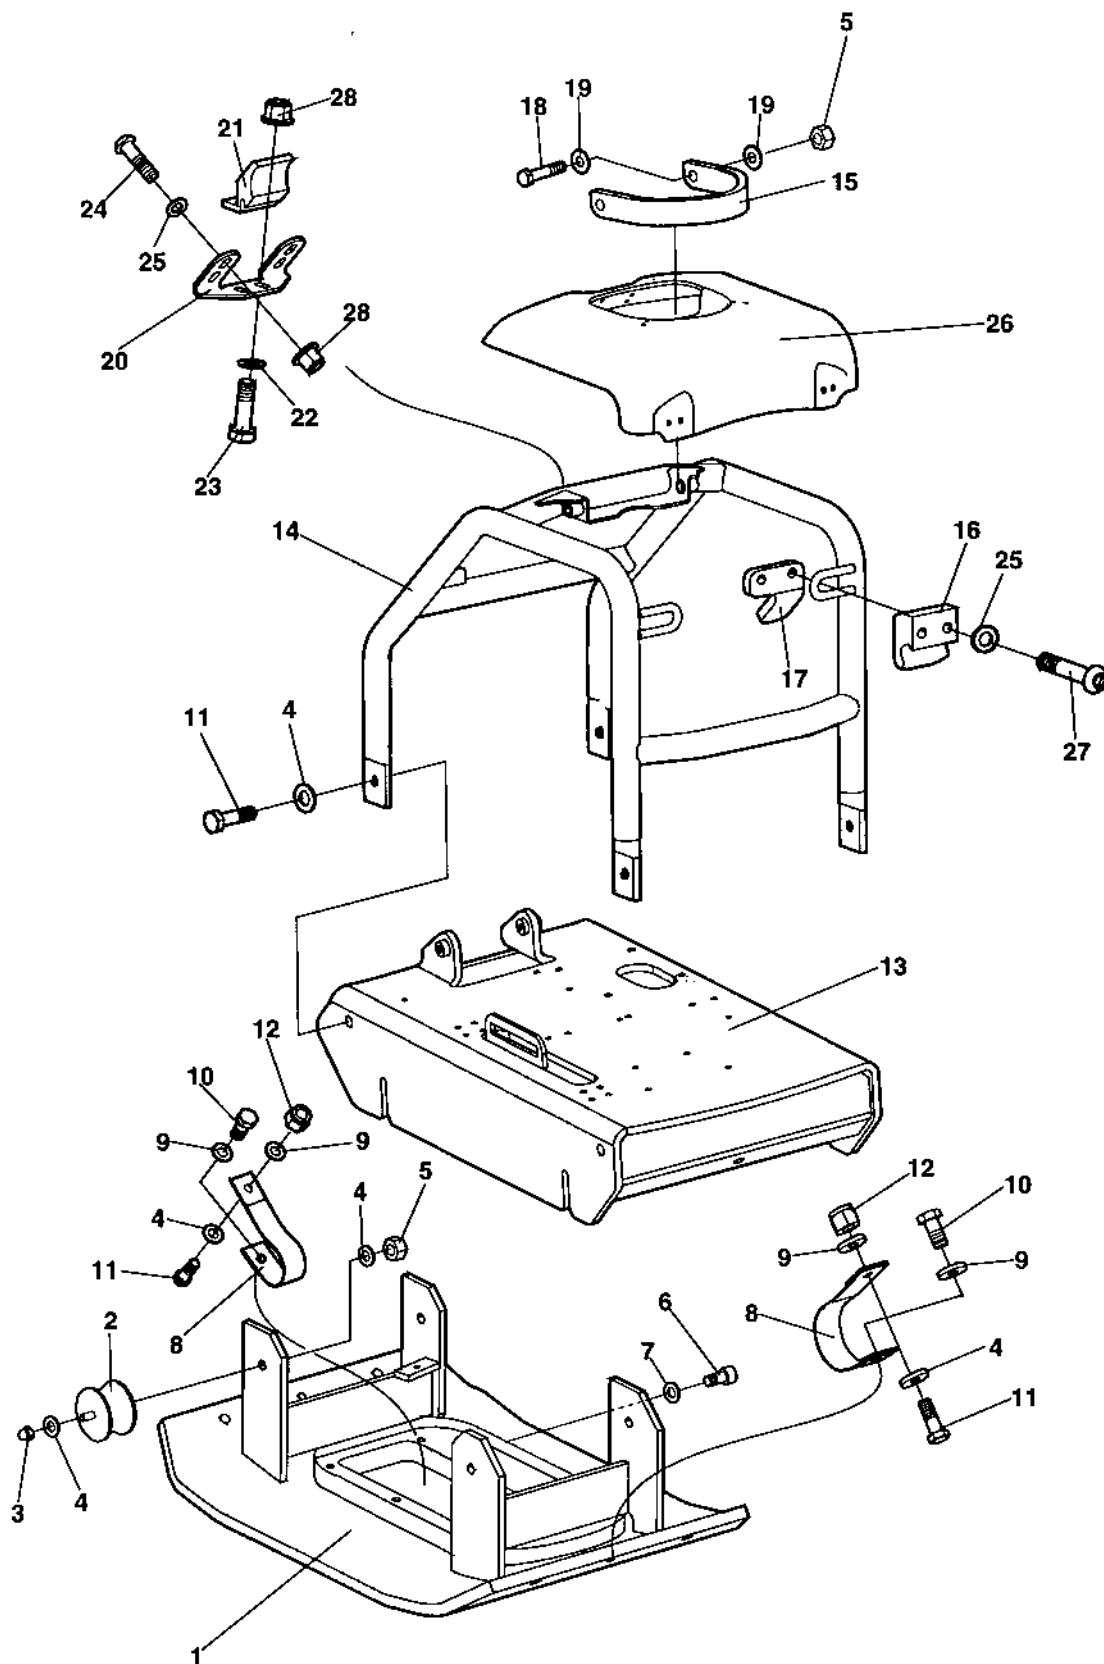


Ground plate, engine plate and frame

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	280621		1	Ground plate	
2	280750		4	Shock absorber	B
3	581013		4	Nut	
4	904231		12	Washer	
5	570007		6	Hexagon nut	M12
6	508028		1	Screw	
7	747541		1	Washer	D
8	100505036		2	Strap	D
9	924543		4	Washer	
10	500051		2	Screw	
11	500037		6	Screw	
12	586019		2	Lock nut	M12
13	386986-01		1	Engine base	
14	387113-03		1	Protective frame	
15	284237-03		1	Lifting lug	
16	387260		2	Clip	
17	387705		2	Stop	
18	500049		2	Screw	
19	904742		4	Washer	
20	387261		1	Bracket	
21	387259		1	Clip	
22	904228		2	Washer	
23	500040		2	Screw	
24	791524		4	Screw	
25	904655		8	Washer	
26	387257		1	Hood	
27	904798		4	Screw	
28	902285		6	Lock nut	

Option, transport device

17952

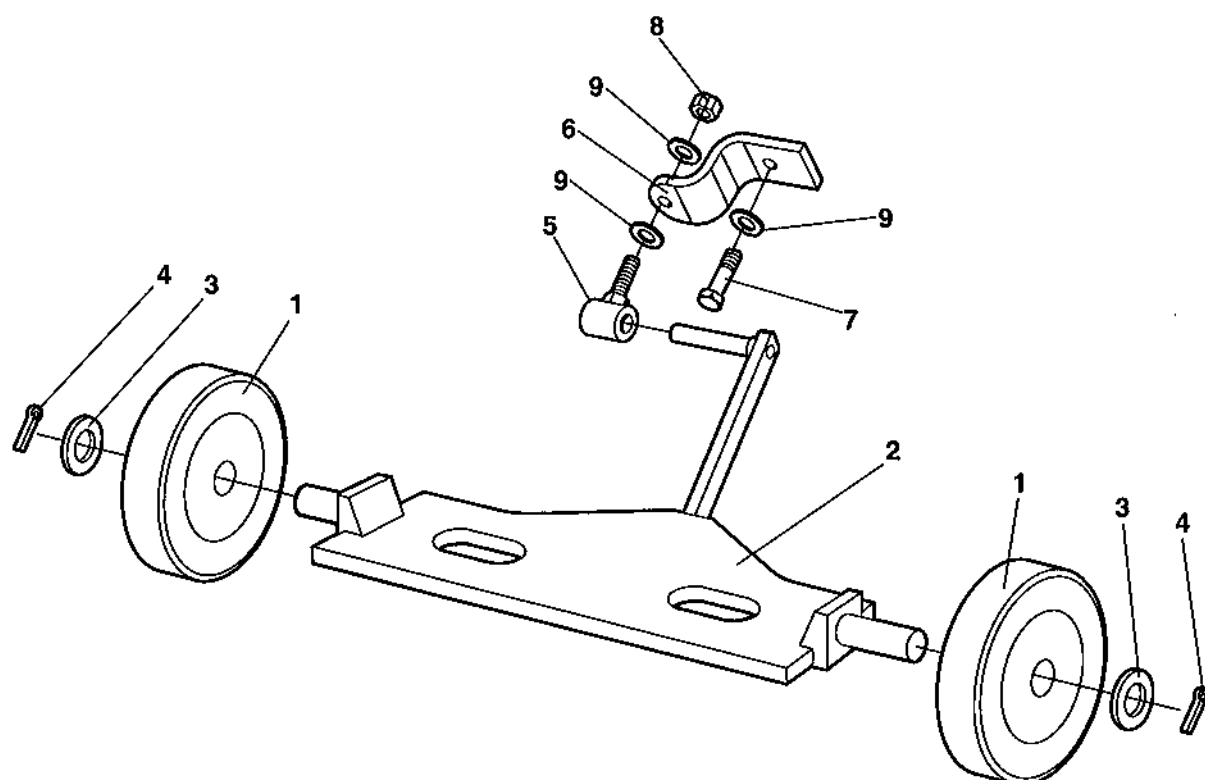


Option, transport device

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	383598		2	Wheel	
2	281887		1	Transport device	
3	271032		2	Washer	
4	630010		2	Split pin	
5	281893		1	Bracket	
6	389243		1	Bracket	
7	500056		1	Screw	M12x45 8,8
8	570007		1	Hexagon nut	M12
9	904231		3	Washer	
10			1		

Transport device New version

18682

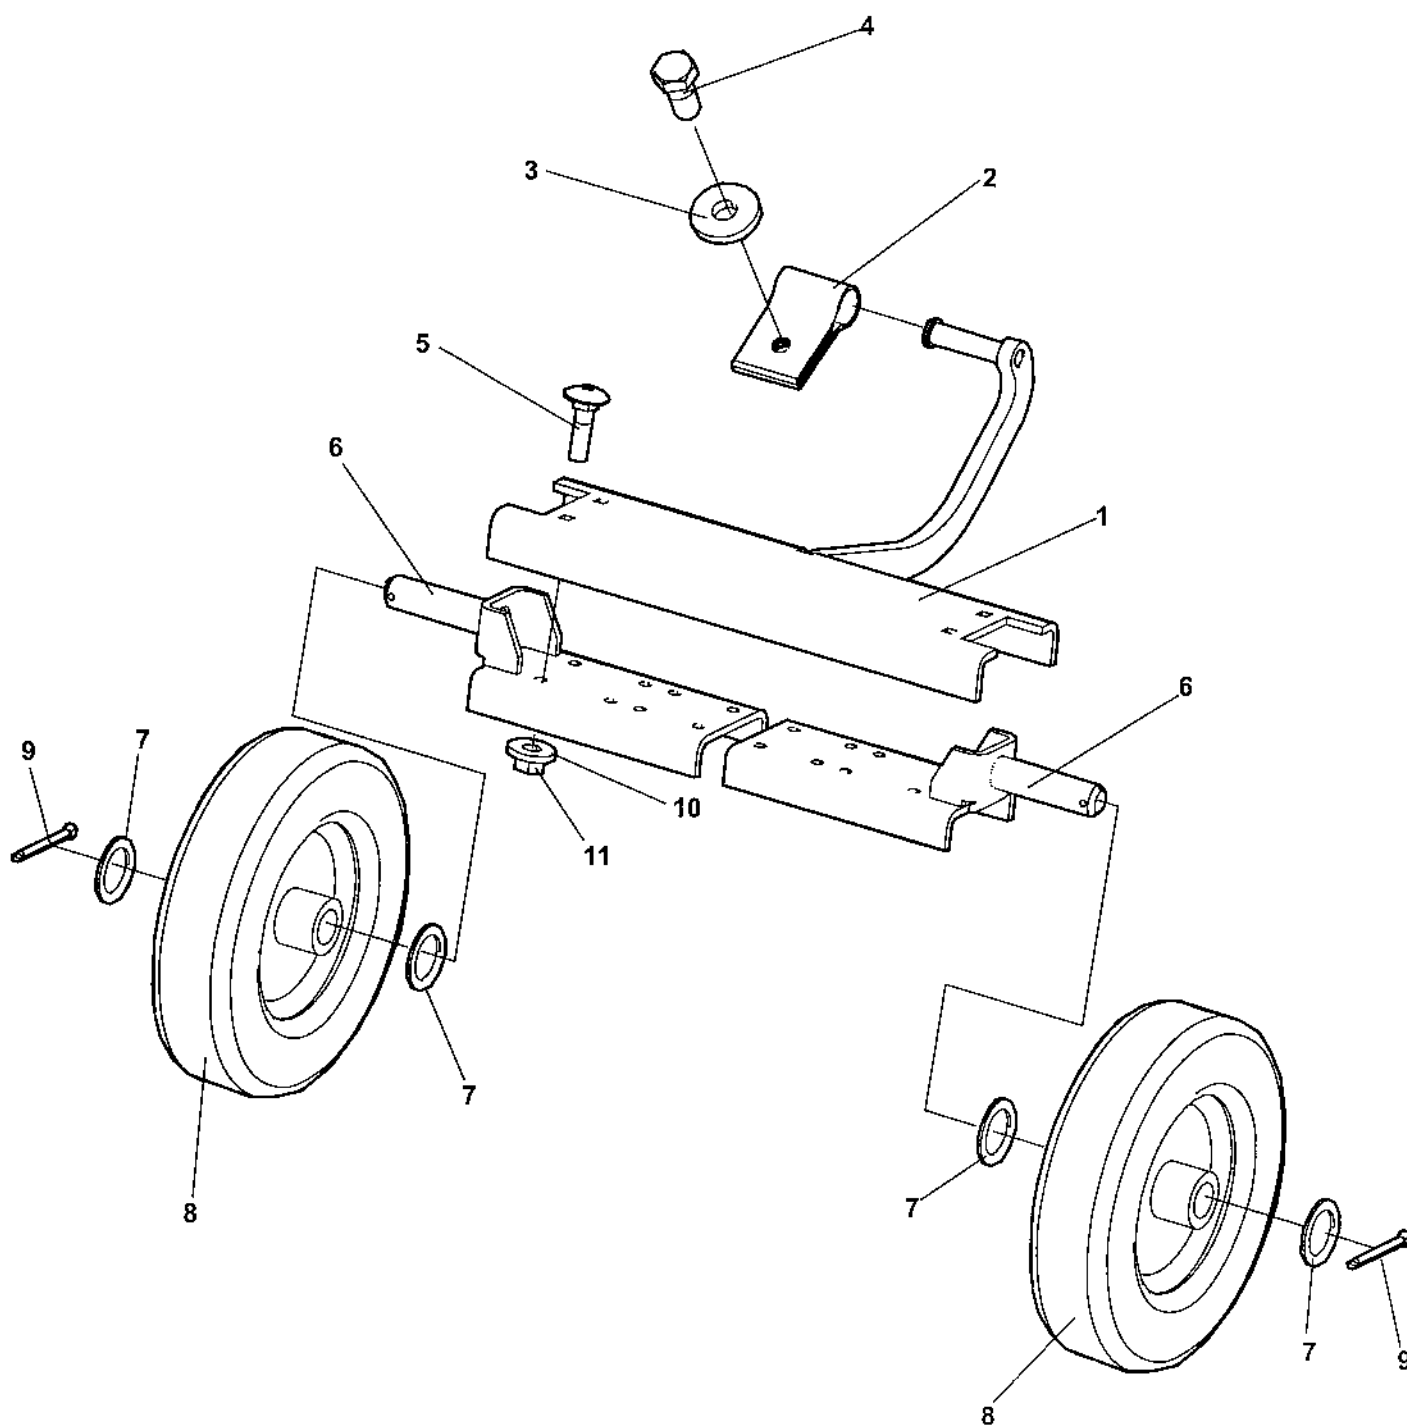


Transport device New version

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	394933		1	Transport device	B
2	280417		1	Strap	
3	924543		1	Washer	
4	500051		1	Screw	
5	791614		4	Screw	
6	394985		2	Wheel bracket	
7	271032		4	Washer	
8	383598		2	Wheel	
9	630015		2	Split pin	
10	904640		4	Washer	
11	570005		4	Nut	

Eccentric element

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Eccentric element (Page 14)	
11			1		

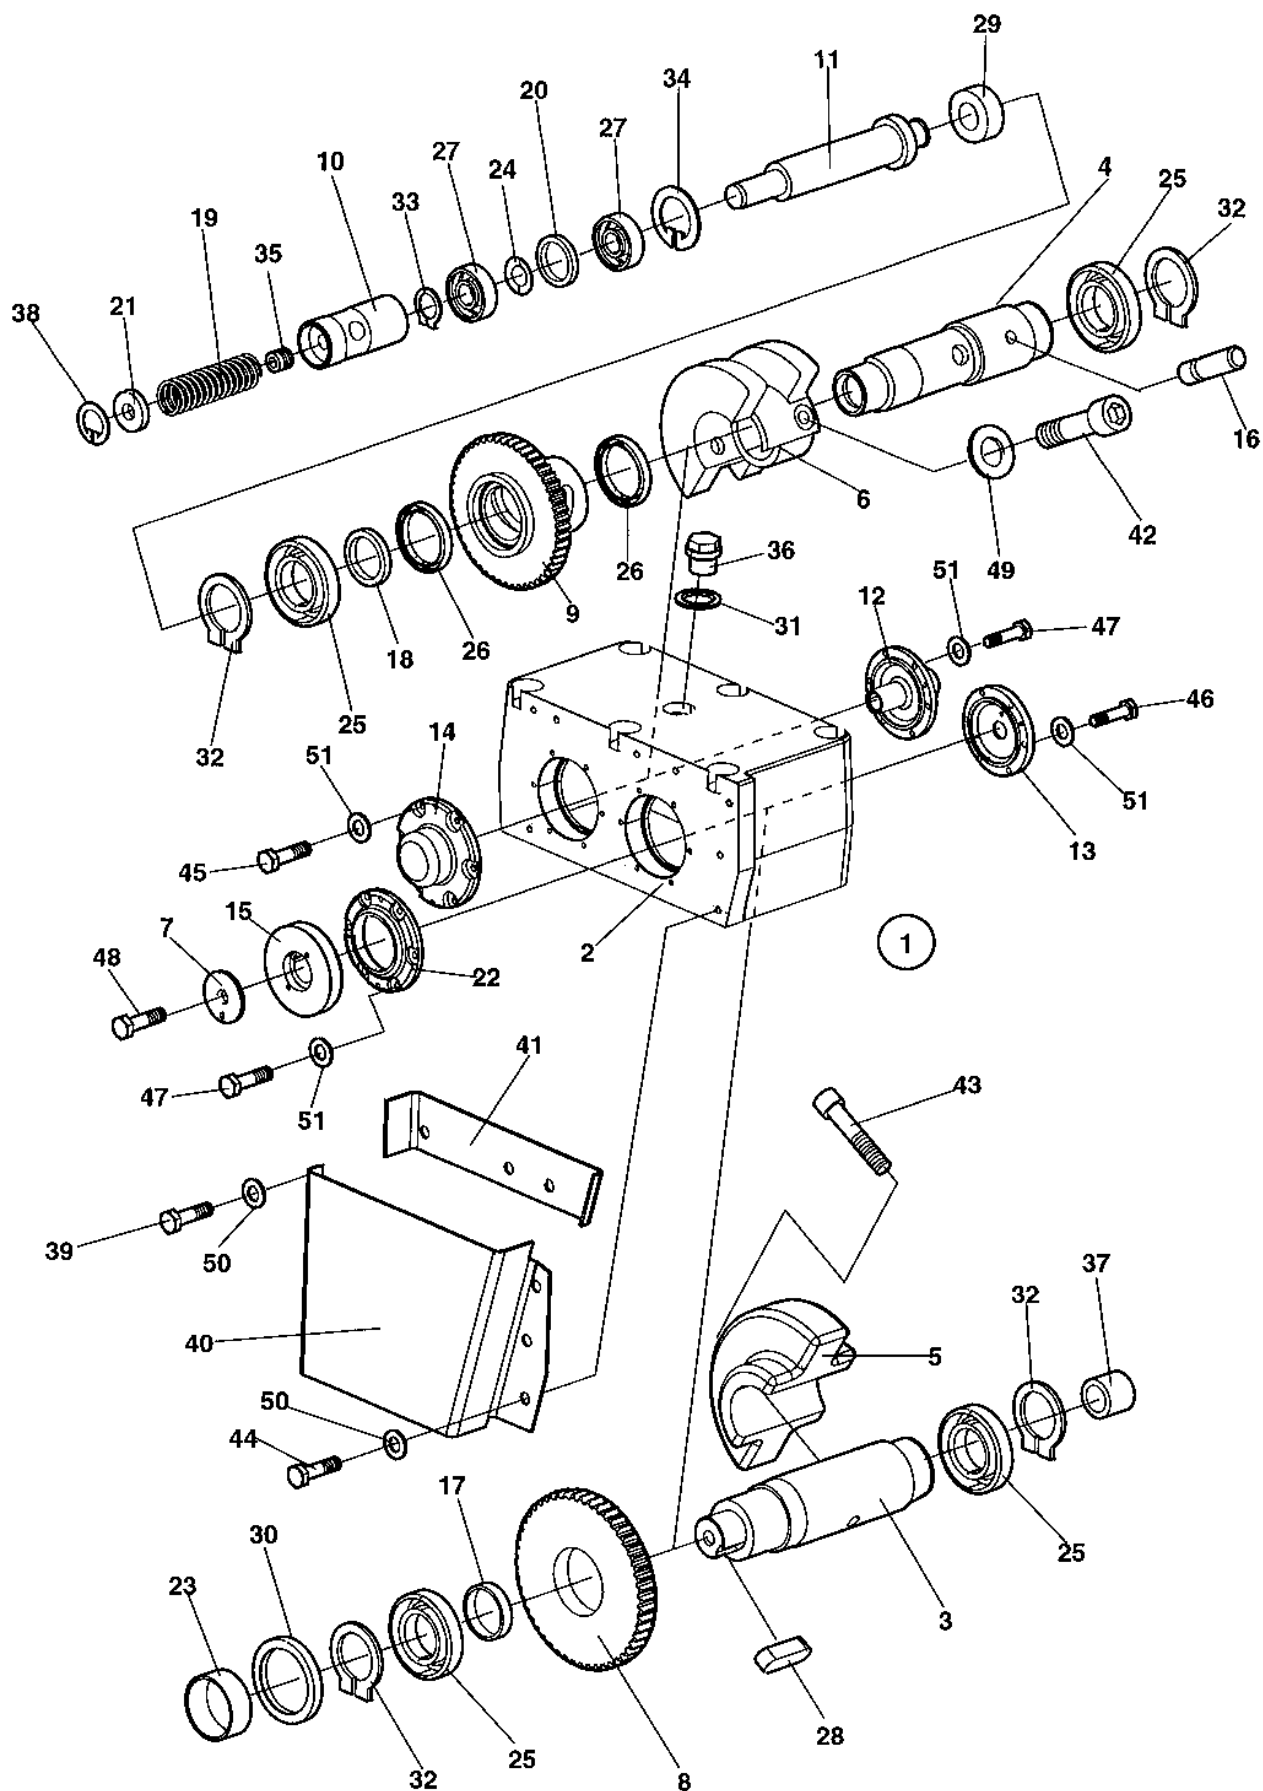


Eccentric element

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Eccentric element, cpl	
2	280662		1	.Eccentric housing	
3	280630		1	.Shaft	
4	280631		1	.Shaft	
5	280663		1	.Eccentric weight	D
6	280669		1	.Eccentric	D
7	280654		1	.Washer	
8	280670		1	.Gear	D
9	280659		1	.Changer	D
10	280637		1	.Piston	
11	280638		1	.Piston	
12	280639		1	.Cylinder	
13	280640		1	.Cover	
14	280642		1	.Cover	
15	280643		1	.Pulley	
16	280644		1	.Pin	
17	280645		1	.Spacer ring	
18	280646		1	.Spacer	
19	280677		1	.Spring	
20	280647		1	.Spacer ring	
21	280648		1	.Washer	
22	280850		1	.Cover	
23	928795		1	.Sleeve	
24	929291		10	.Cup spring	
25	903363		4	.Ball bearing	D
26	929287		2	.Ball bearing	D
27	929286		2	.Ball bearing	D
28	350029		1	.Key	
29	281276		1	.Sealing ring	
30	928794		1	.Sealing ring	D
31	162011		1	.Washer, sealing	D
32	150017		4	.Retaining ring	D
33	150002		1	.Retaining ring	
34	151039		1	.Retaining ring	
35	928241		1	.Screw	
36	232143		1	.Plug	
37	928893		1	.Sleeve	
38	151007		1	.Retaining ring	
39	500022		2	.Screw	
40	280871		1	.V-belt cover	
41	280858		1	.V-belt protection, inner	
42	508031		1	.Screw	
43	508042		1	.Screw	
44	500053		6	.Screw	
45	500013		6	.Screw	
46	500075		6	.Screw	M6-1,0x25 8.8
47	500040		12	.Screw	
48	500028		1	.Screw	
49	904231		1	.Washer	
50	904229		8	.Washer	
51	904228		12	.Washer	
52	929454		6	Screw	
53	904213		6	Washer	

Engine and engine installation

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Engine Honda GX200 (Page 18)	
20				Engine Hatz 1B20 (Page 20)	
30				Engine installation, Honda (Page 24)	
40				Engine installation, Hatz (Page 26)	

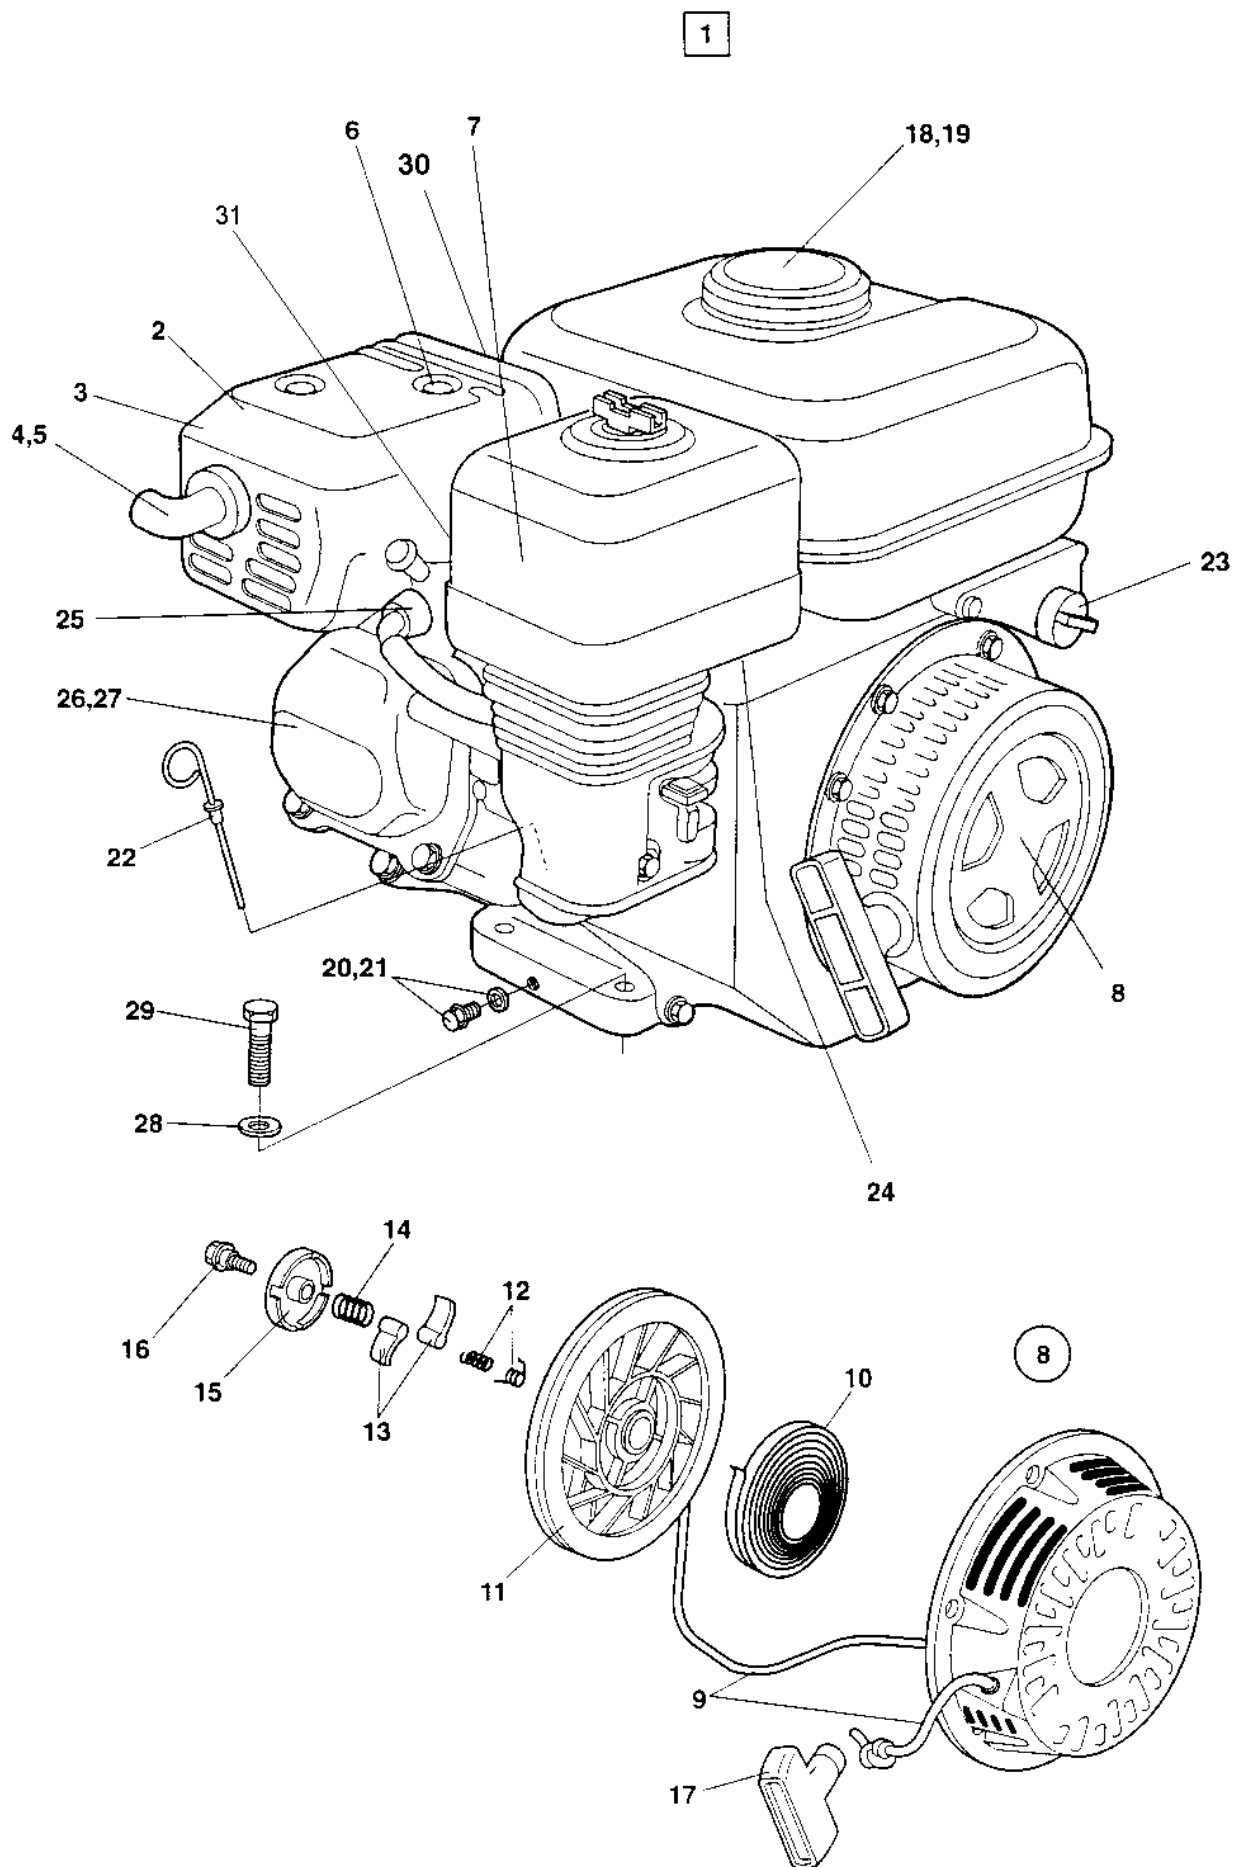


Engine Honda GX200

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387979		1	Engine, cpl	
2	239889		1	.Muffler	
3	239890		1	.Muffler cover	
4				Not used on this model	
5				Not used on this model	
6	239063		1	.Gasket, muffler	
7	239064		1	.Air cleaner element, cpl	A
8	239065		1	.Recoil starter, cpl	D
9	239374		1	..Starter rope	B
10	239375		1	..Spring	B
11	239376		1	..Reel	
12	239377		2	..Spring	
13	239378		2	..Ratchet	
14	239379		1	..Friction spring	
15	239380		1	..Guide	
16	239381		1	..Screw	
17	239391		1	..Handle	B
18	239321		1	.Fuel tank	
19	239324		1	.Fuel tank cap	D
20	239682		2	.Plug	D
21	238303		2	.Gasket	D
22	935802		1	.Oil level plug	
23	239067		1	.Oil alert	
24			1	.Carburettor, cpl.	
25	239565		1	.Spark plug	A
26	238301		1	.Gasket	D
27	238309		1	.Gasket, cylinder head	B
28		A	4	Washer	B
29		A	4	Screw	B
30			1	Catalyser	B
31	573002	B	1	Nut	M5

A) See section engine installtion


B) Locking nut for revolution screw

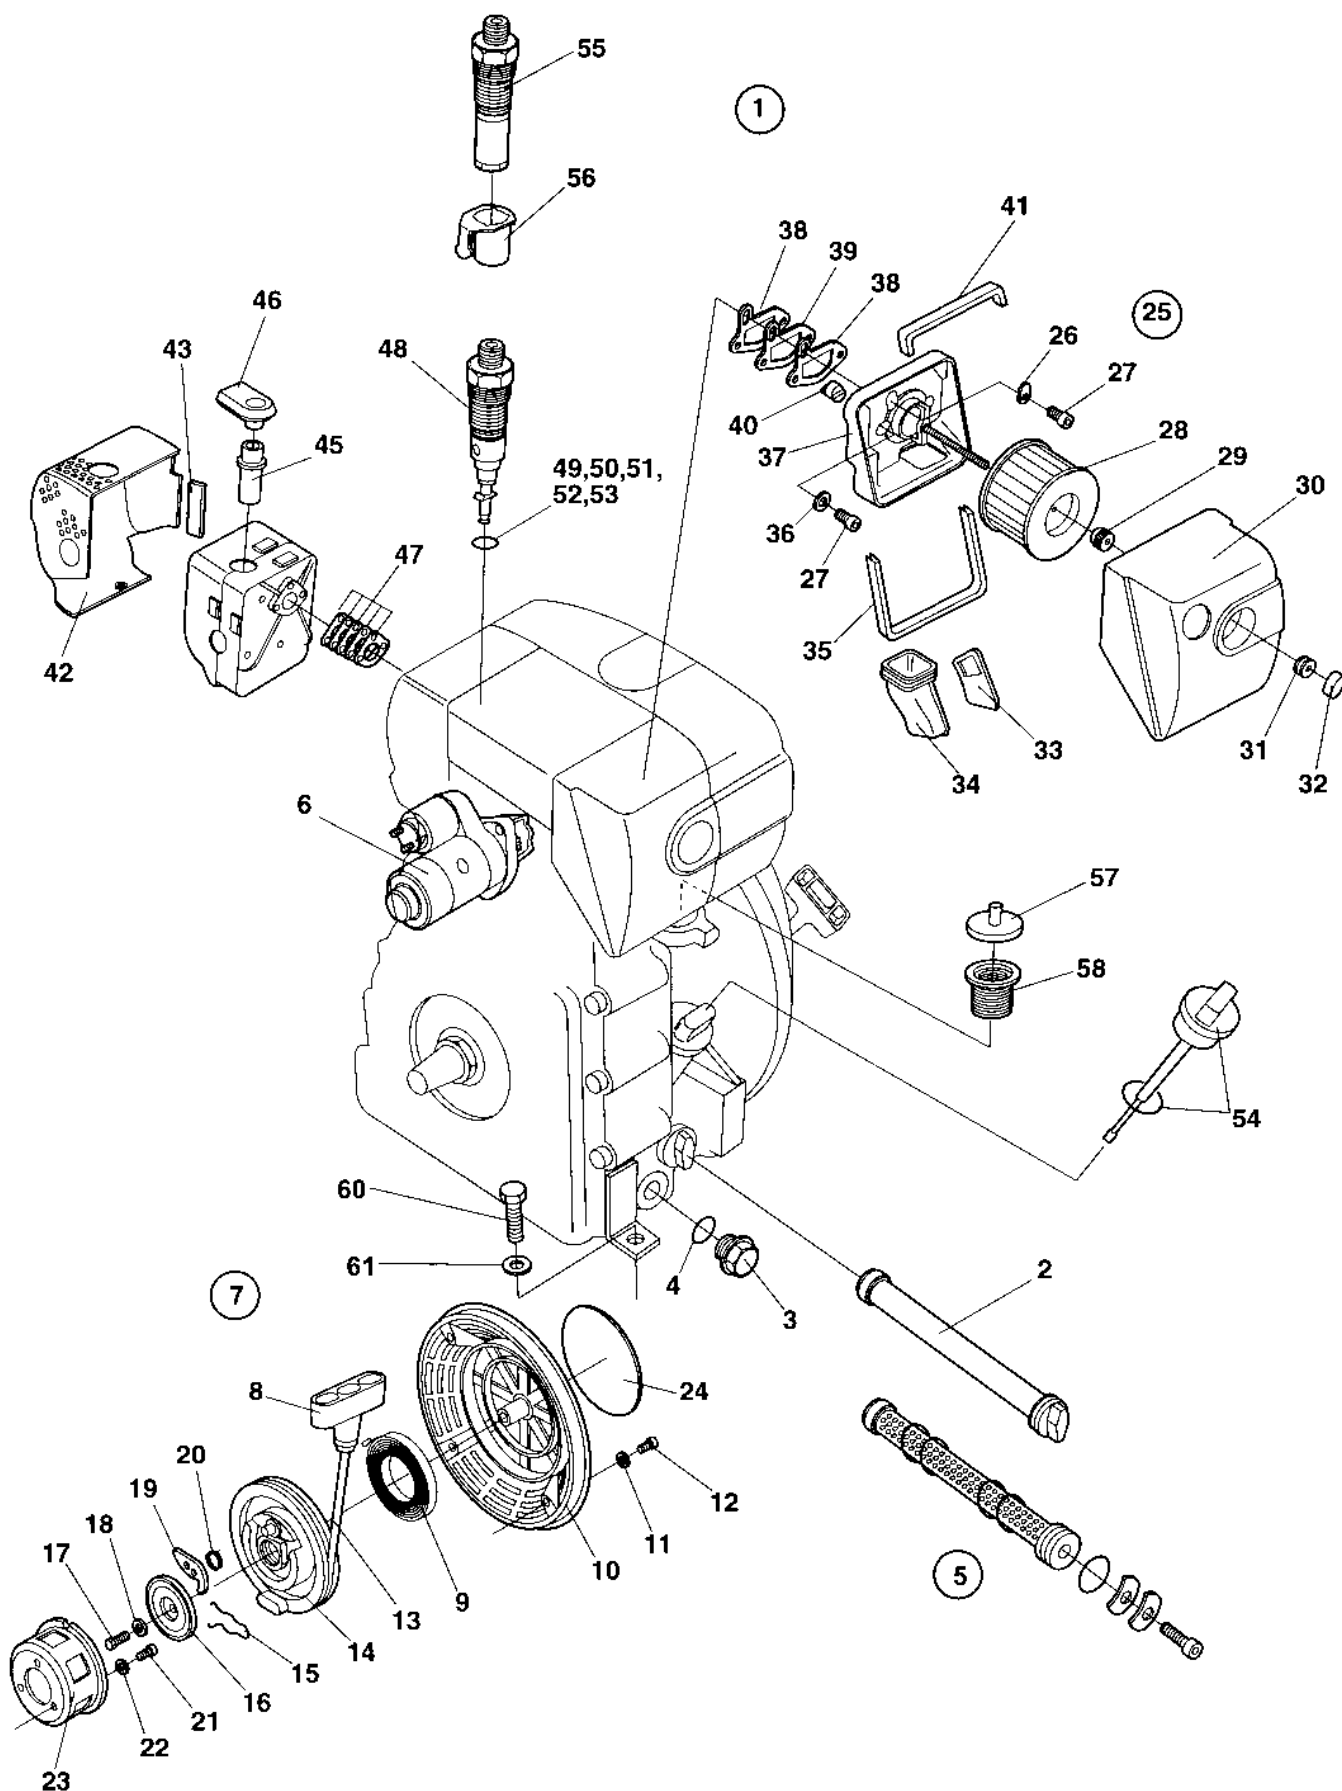

Engine Hatz 1B20

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	391058		1	Engine, cpl	Hatz 1B20
	391057		1	Engine, cpl	Hatz 1B20, electrical started
	383293	B	1	.Summer	
	939588	B	1	.Instrument box, cpl	
	938146	B	1	..Ignition switch	
	938086	B	1	..Ignition key	
2				Not used on this model	
3	937002		1	.Plug	D
4	937003		1	.O-ring	B
5	937415		1	.Oil strainer, cpl	
6			1	.Starter	
7	936982		1	.Recoil starter, cpl	D
8	936983		1	..Knob	B
9	936985		1	..Spiral spring	B
10	936986		1	..Housing	
11	936987		4	..Washer	
12	936988		4	..Screw	
13	936989		1	..Rope	B
14	936990		1	..Reel	
15	936991		1	..Spring	B
16	936992		1	..Friction plate	
17	936993		1	..Screw	
18	936994		1	..Washer	
19	936995		1	..Ratchet	
20	936996		1	..O-ring	
21	936997		3	.Screw	
22	936998		3	.Washer	
23	936999		1	.Starter pulley	
24	937000		1	.Decal	
25			1		
26	937011		1	.Washer	
27	937012		3	.Screw	
28	937013		1	.Filter element	A
29	937014		1	.Nut	
30	937015		1	.Protecting cover	
31	937016		1	.Rubber sleeve	
32	937017		1	.Nut	
33	937018		1	.Plate	
34	937019		1	.Rubber hose	
35	937020		1	.Edge trim	
36	239517		2	.Washer	
37	937021		1	.Air filter house	
38	937022		2	.Gasket	
39	937023		1	.Gasket	
40	937024		1	.Vent nipple	
41	937010		1	.Edge trim	
42	937007		1	.Protecting cover	
43	937008		1	.Edge trim	
44	937009		1	.Muffler	
45	937005		1	.Exhaust tube	
46	937004		1	.Exhaust pipe	
47	937006		6	.Gasket	
48	936976		1	.Injection pump cpl	D
49	936977		1	..O-ring	0,2 mm
50	936978		1	..O-ring	0,3 mm
51	936979		1	..O-ring	0,4 mm
52	936980		1	..O-ring	0,5 mm
53	936981		1	..O-ring	0,6 mm


B) For electrical version

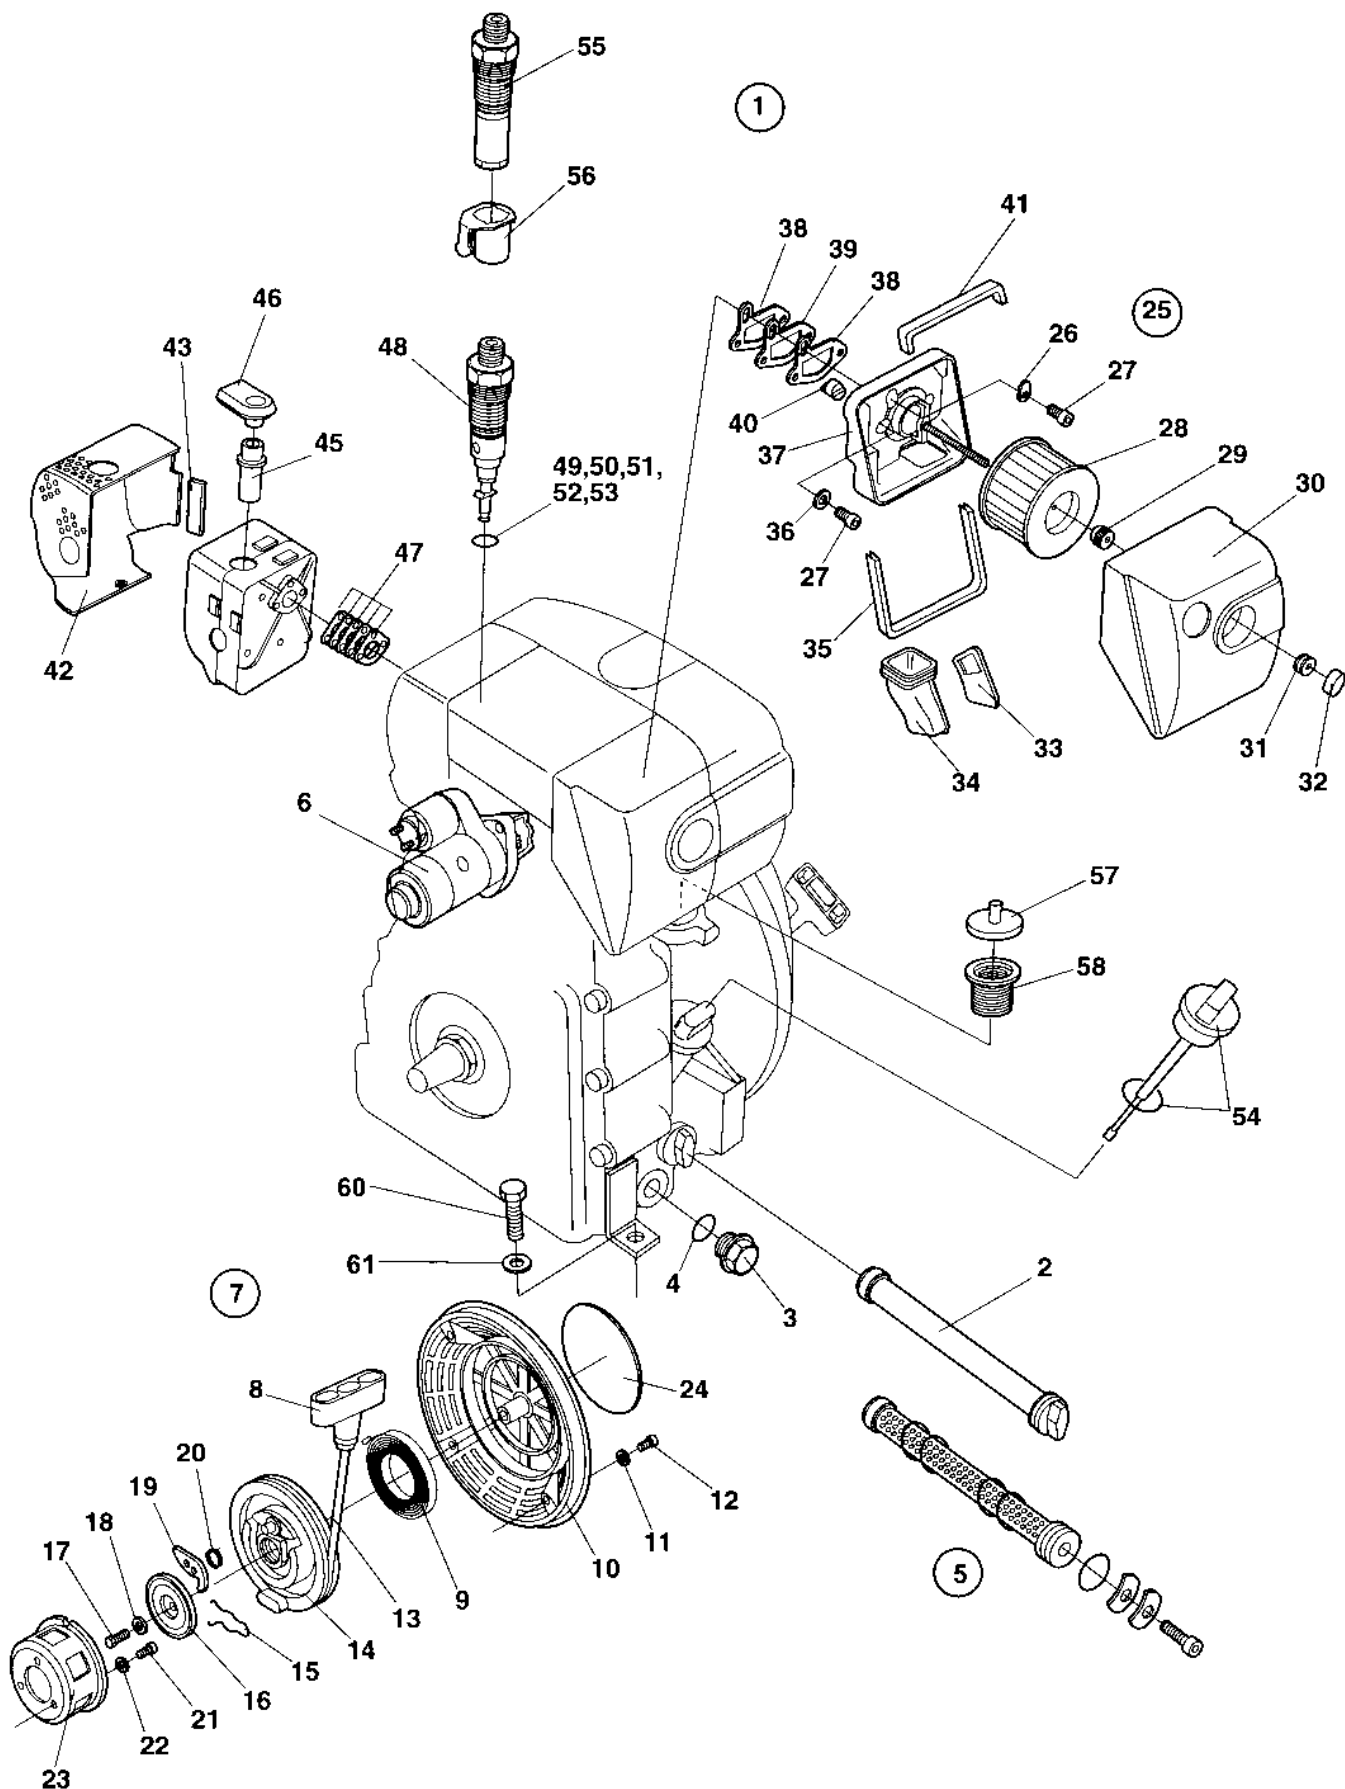

Engine Hatz 1B20

Ref. No.	Part No.	Rem.	Qty	Description	Code
54	937608		1	.Oil dipstick	
55	938968		1	.Nozzle	
56	937606		1	.Sleeve	
57	937604		1	.Lock	
58	937605		1	.Socket	
60		A	4	Screw	
61		A	4	Washer	


A) See section engine installation

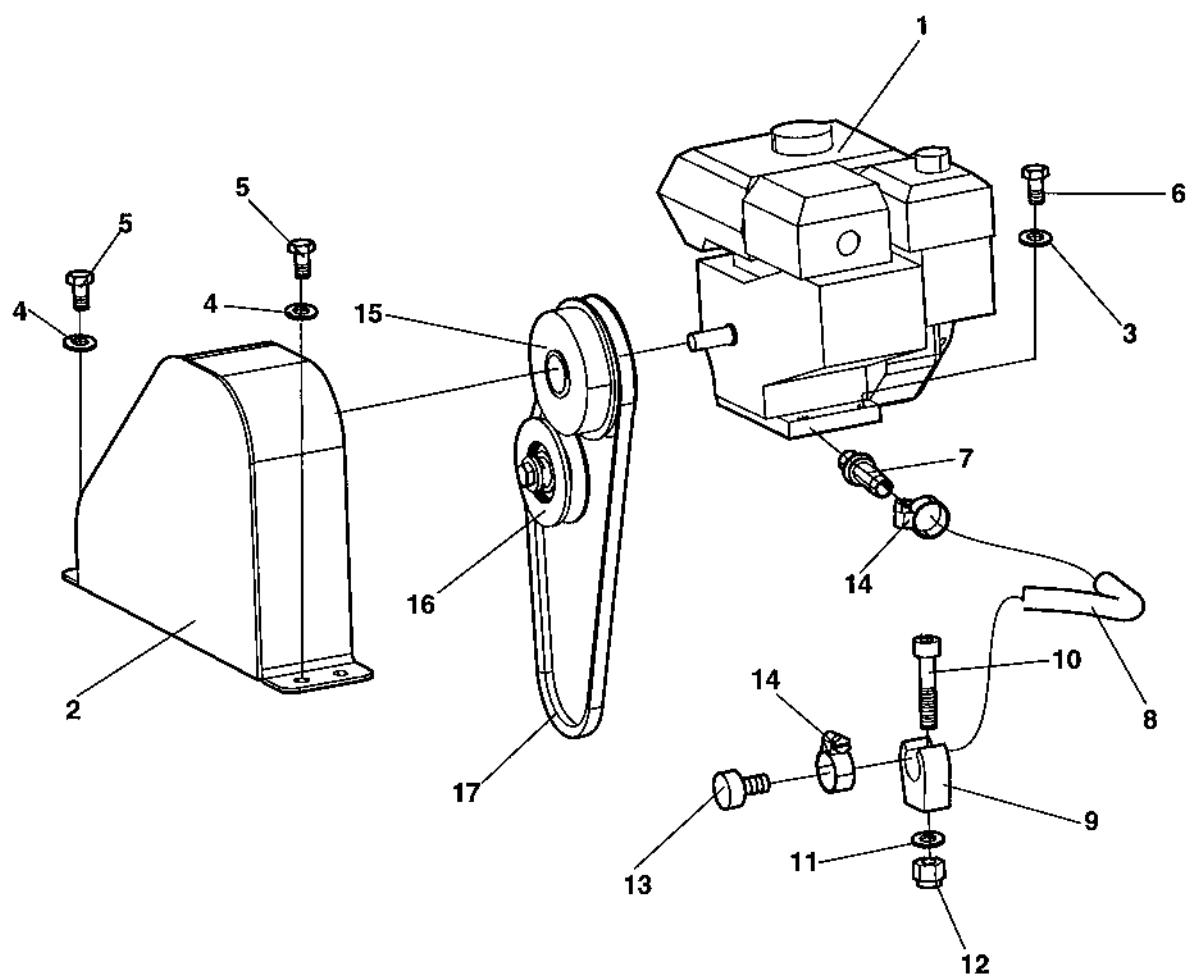

Engine installation, Honda

Ref. No.	Part No.	Rem.	Qty	Description	Code
1				Engine Honda GX200 (Page 18)	
2	387301-02		1	V-belt guard	
3	904229		4	Washer	
4	904640		4	Washer	
5	500019		4	Screw	M8x16 8.8
6	500047		4	Screw	M8-1,25x35 8,8
7	100504811		1	Hose connection	
8	100901382		1	Hose	
9	281234		1	Ryw-clips	
10	508023		1	Screw	
11	904281		1	Washer	
12	902284		1	Nut	M5
13	100504609		1	Plug	
14	313001		2	Hose clamp	
15		A		Clutch, cpl	
16		A		Idler, cpl	
17		A		V-belt	
18			1		

A) See section power transmission

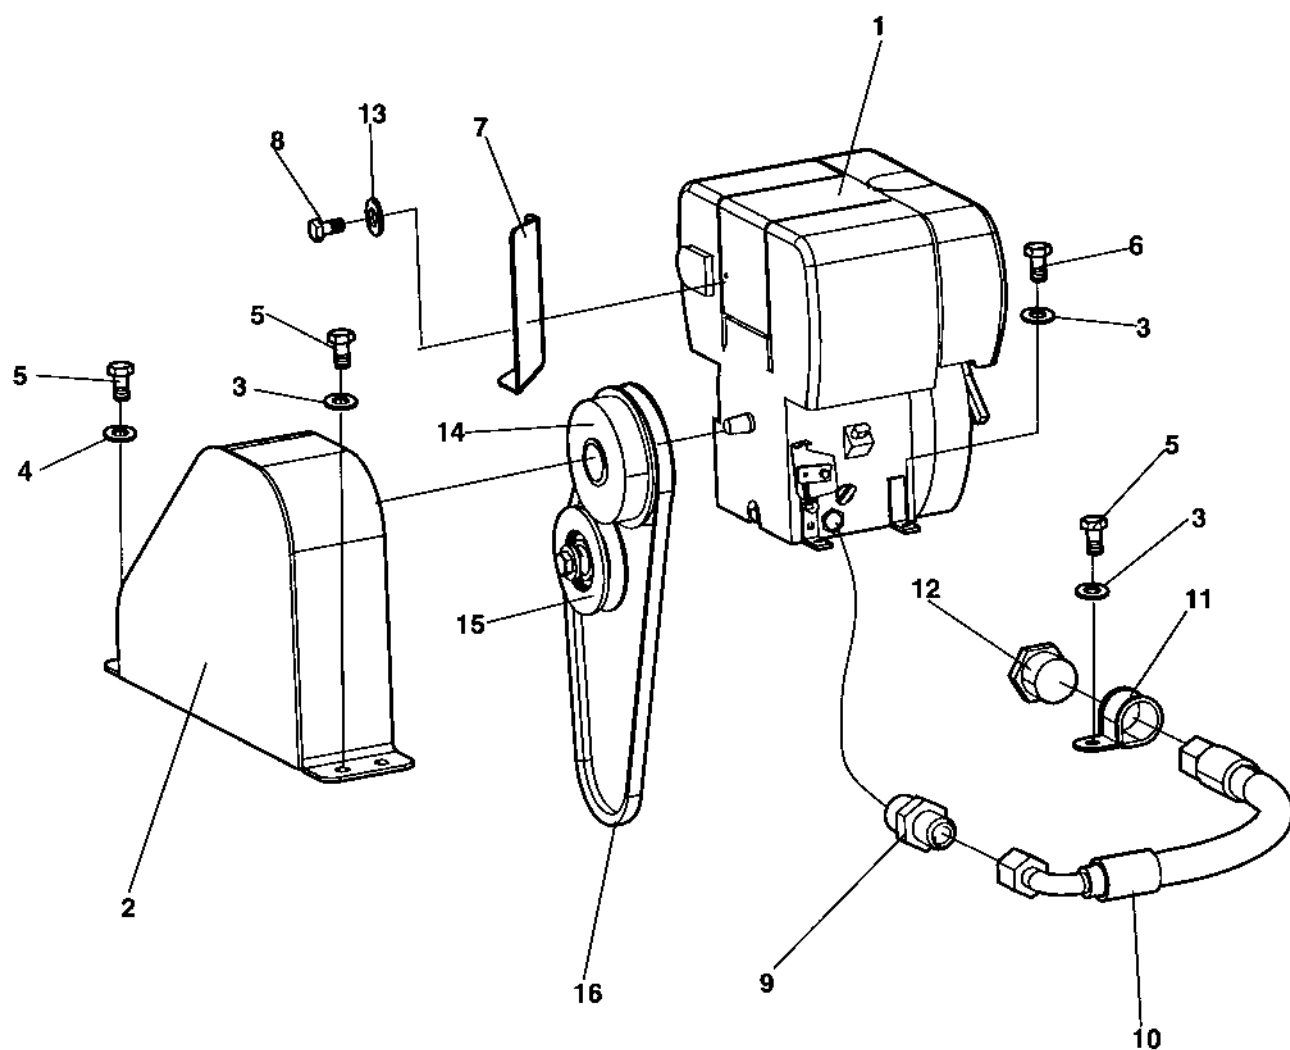

Engine installation, Hatz


Ref. No.	Part No.	Rem.	Qty	Description	Code
1				Engine Hatz 1B20 (Page 20)	
2	387301-02		1	V-belt guard	
3	904229		5	Washer	
4	904640		4	Washer	
5	500019		5	Screw	M8x16 8.8
6	500021		4	Screw	
7	387577		1	Deflector	
8	508002		1	Screw	
9	903925	B	1	Connector	
10	482328	B	1	Hydraulic hose	
11	921044	B	1	Clamp	
12	232095	B	1	Plug	
13	904228		1	Washer	
14		A	1	Clutch	
15		A	1	Idler, cpl	
16		A	1	V-belt	

A) See section power transmission

B) Old version

Power transmission

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Power transmission, Honda (Page 30)	
20				Power transmission, Hatz (Page 32)	Up to S/N: 32003323
30				Power transmission, Hatz (Page 34)	From S/N: 32003324
31			1		

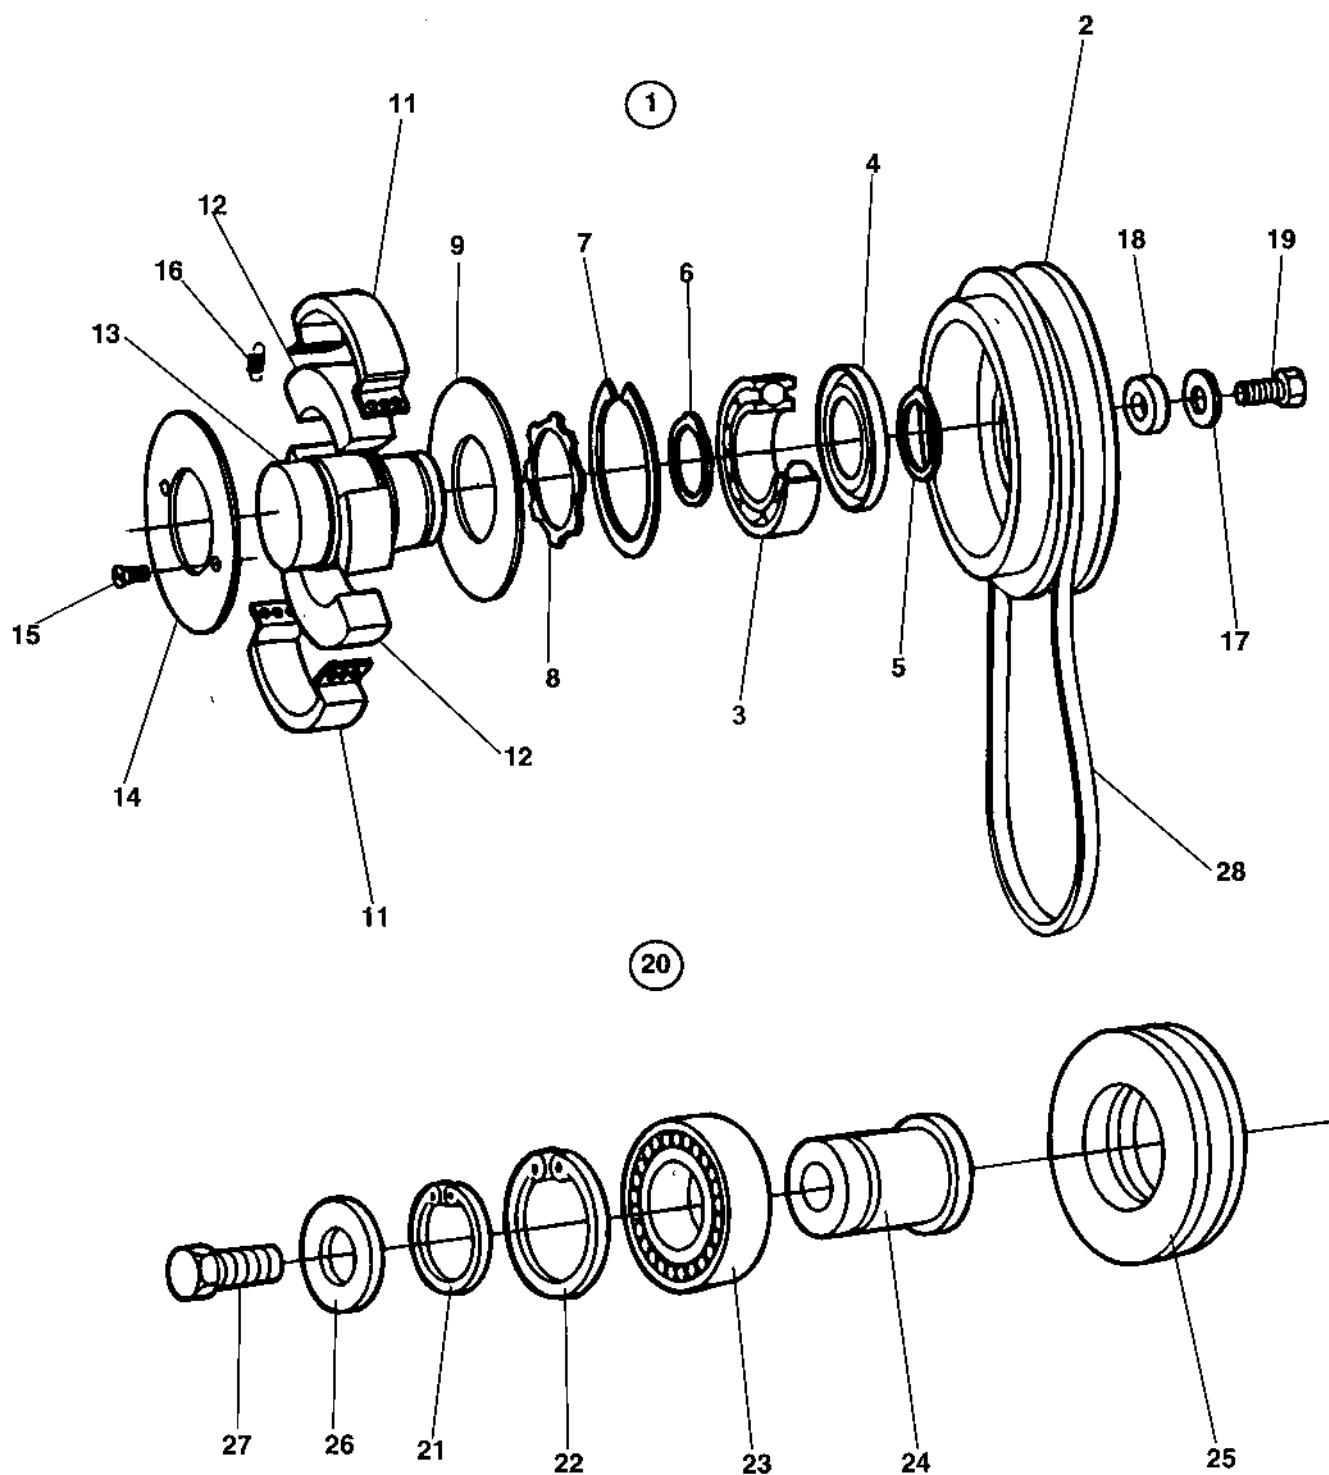


Power transmission, Honda

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	281124		1	Centrifugal clutch, cpl	D
2	935803		1	.Pulley	
3	111180		1	.Ball bearing	D
4				Not used on this model	D
5	150012		1	.Snap ring	D
6				Not used on this model	D
7	151019		1	.Retaining ring	D
8	239734		1	.Retaining ring	
9	935808		1	.Cover	
10	935807		1	.Hub	
11	929360		2	.Clutch lining	B
12	239290		2	.Weight	D
13	935807		1	.Hub	
14	100901024		1	.Cover	
15	535002		2	.Screw	
16	929356		2	.Spring	B
17	904734		1	Washer	
18				Not used on this model	
19	500021		1	Screw	
20	280835		1	Idler, cpl	D
21	150009		1	.Snap ring	
22	151017		1	.Snap ring	
23	111114		1	.Ball bearing	
24	280837		1	.Shaft	
25	280836		1	.V-belt pulley	D
26	904213		1	Washer	
27	500046		1	Screw	
28	281345		1	V-belt	B

Power transmission, Hatz Up to S/N: 32003323

16871-1

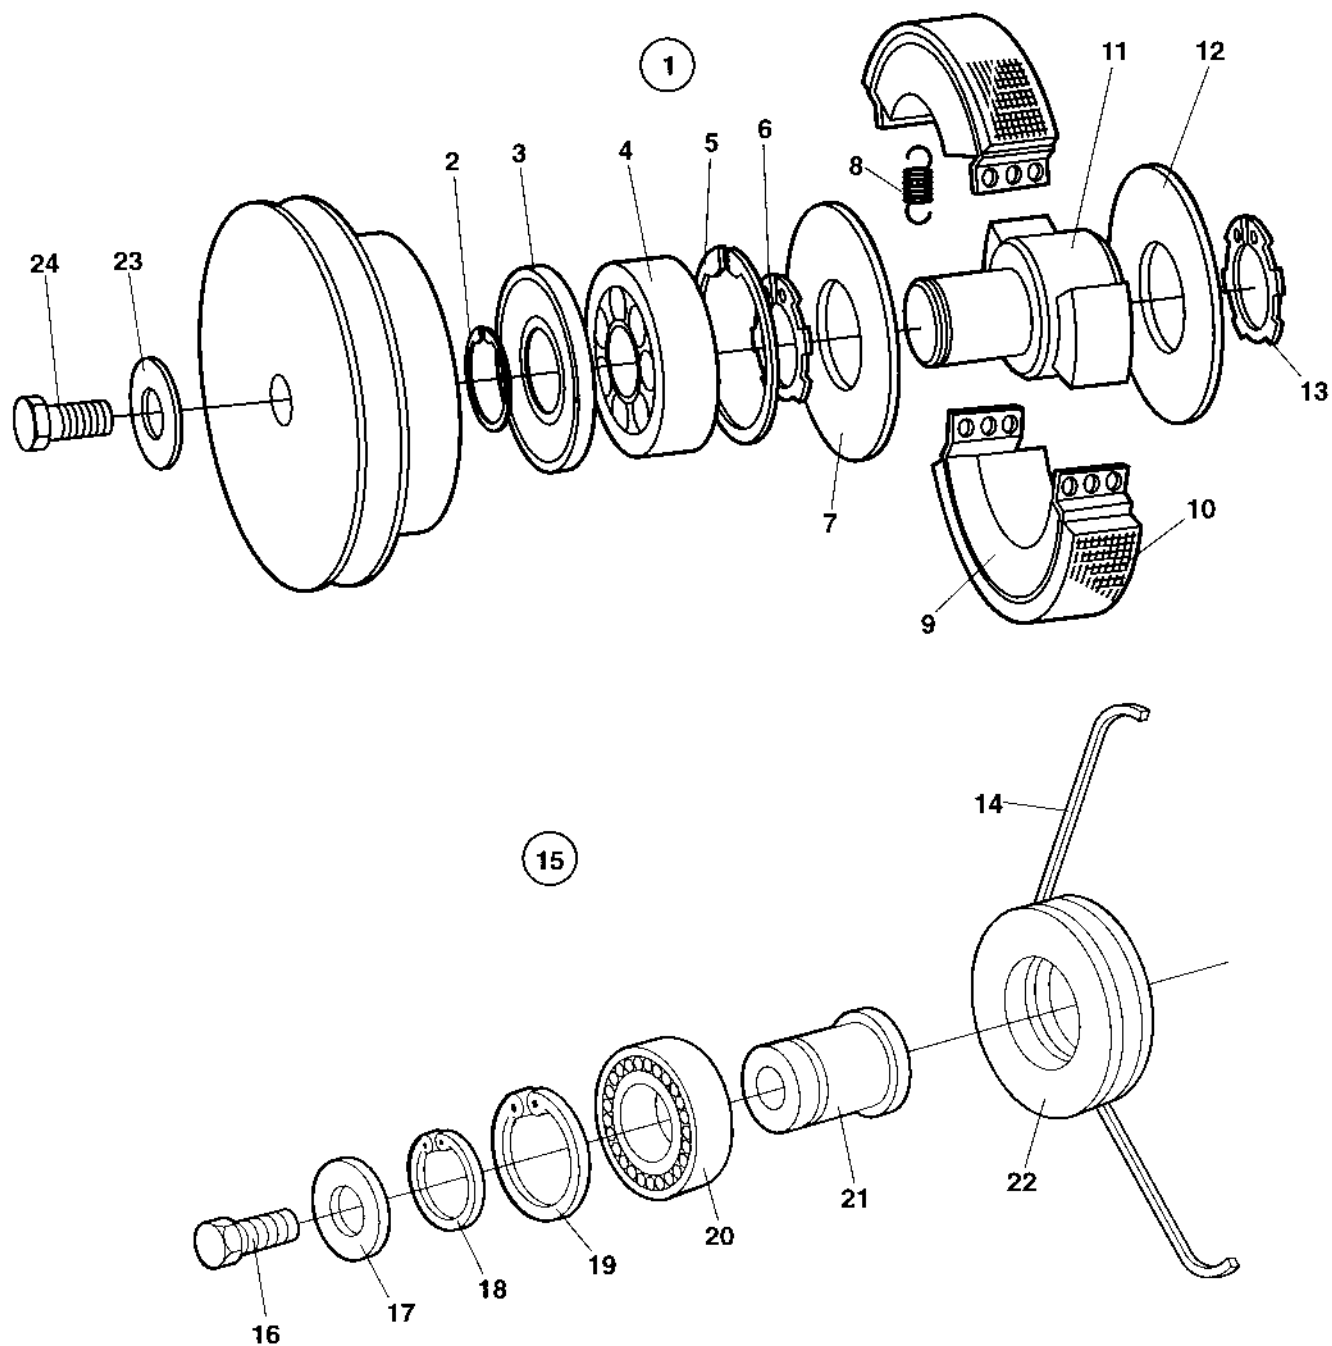


Power transmission, Hatz Up to S/N: 32003323

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	282734		1	Centrifugal clutch, cpl	
2	150015		2	.Snap ring	
3	100901023		1	.Nilos ring	
4	111178		1	.Ball bearing	D
5	151023		1	.Retaining ring	
6	239539		1	.Retaining ring	
7	239857		1	.Cover	
8	239732		4	.Spring	B
9	912477		2	.Centrifugal weight	D
10	100901018		2	.Clutch lining	
11	937031		1	.Hub	
12	935808		1	.Cover	
13	239734		1	.Retaining ring	
14	281249		1	V-belt	B
15	280835		1	Idler, cpl	D
16	500046		1	.Screw	
17	904213		1	.Washer	
18	150009		1	.Snap ring	
19	151017		1	.Snap ring	
20	111114		1	.Ball bearing	
21	280837		1	.Shaft	
22	280836		1	.V-belt pulley	D
23	904734		1	.Washer	
24	500021		1	.Screw	

Power transmission, Hatz From S/N: 32003324

16871-1

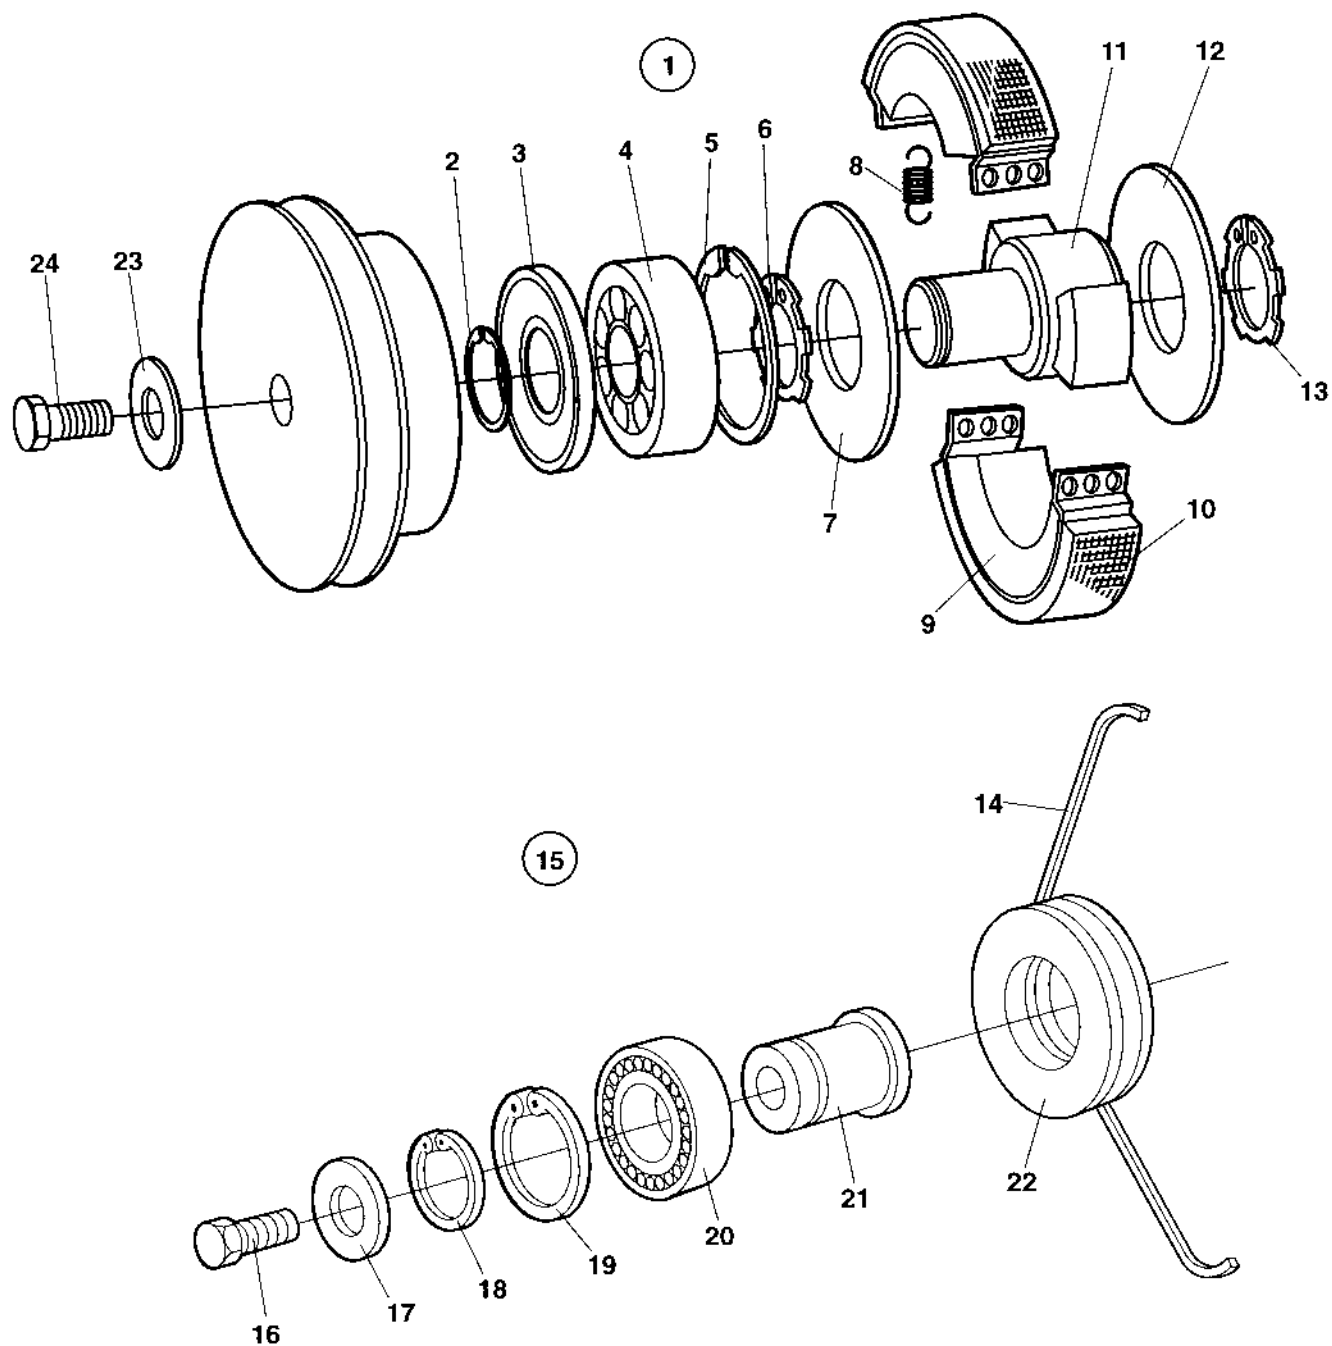

Power transmission, Hatz From S/N: 32003324

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	377620		1	Centrifugal clutch, cpl	
2	937036		1	.Retaining ring	
3		A		Not used on this model	
4	940371		1	.Ball bearing	D
5	937035	B	1	.Retaining ring	
6	239734		1	.Retaining ring	
7	239768		1	.Cover	
8	937527		4	.Spring	
9	940372		2	.Centrifugal weight	D
10	238606		2	.Clutch lining	B
11	940932		1	.Hub	
12	239768		1	.Cover	
13	239734		1	.Retaining ring	
14	281249		1	.V-belt	B
15	280835		1	Idler, cpl	D
16	500046		1	.Screw	
17	904213		1	.Washer	
18	150009		1	.Snap ring	
19	151017		1	.Snap ring	
20	111114		1	.Ball bearing	
21	280837		1	.Shaft	
22	280836		1	.V-belt pulley	D
23	904734		1	.Washer	
24	500022		1	.Screw	
25			1	.	


- A) Not used on this model, replaced by item 5
 B) Mounted at the other side of the ball bearing, item 4

Hydraulic system

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Hydraulic system (Page 38)	Up to SN 32003355
20				Hydraulic system (Page 42)	From SN 32003356

Hydraulic system Up to SN 32003355


17960

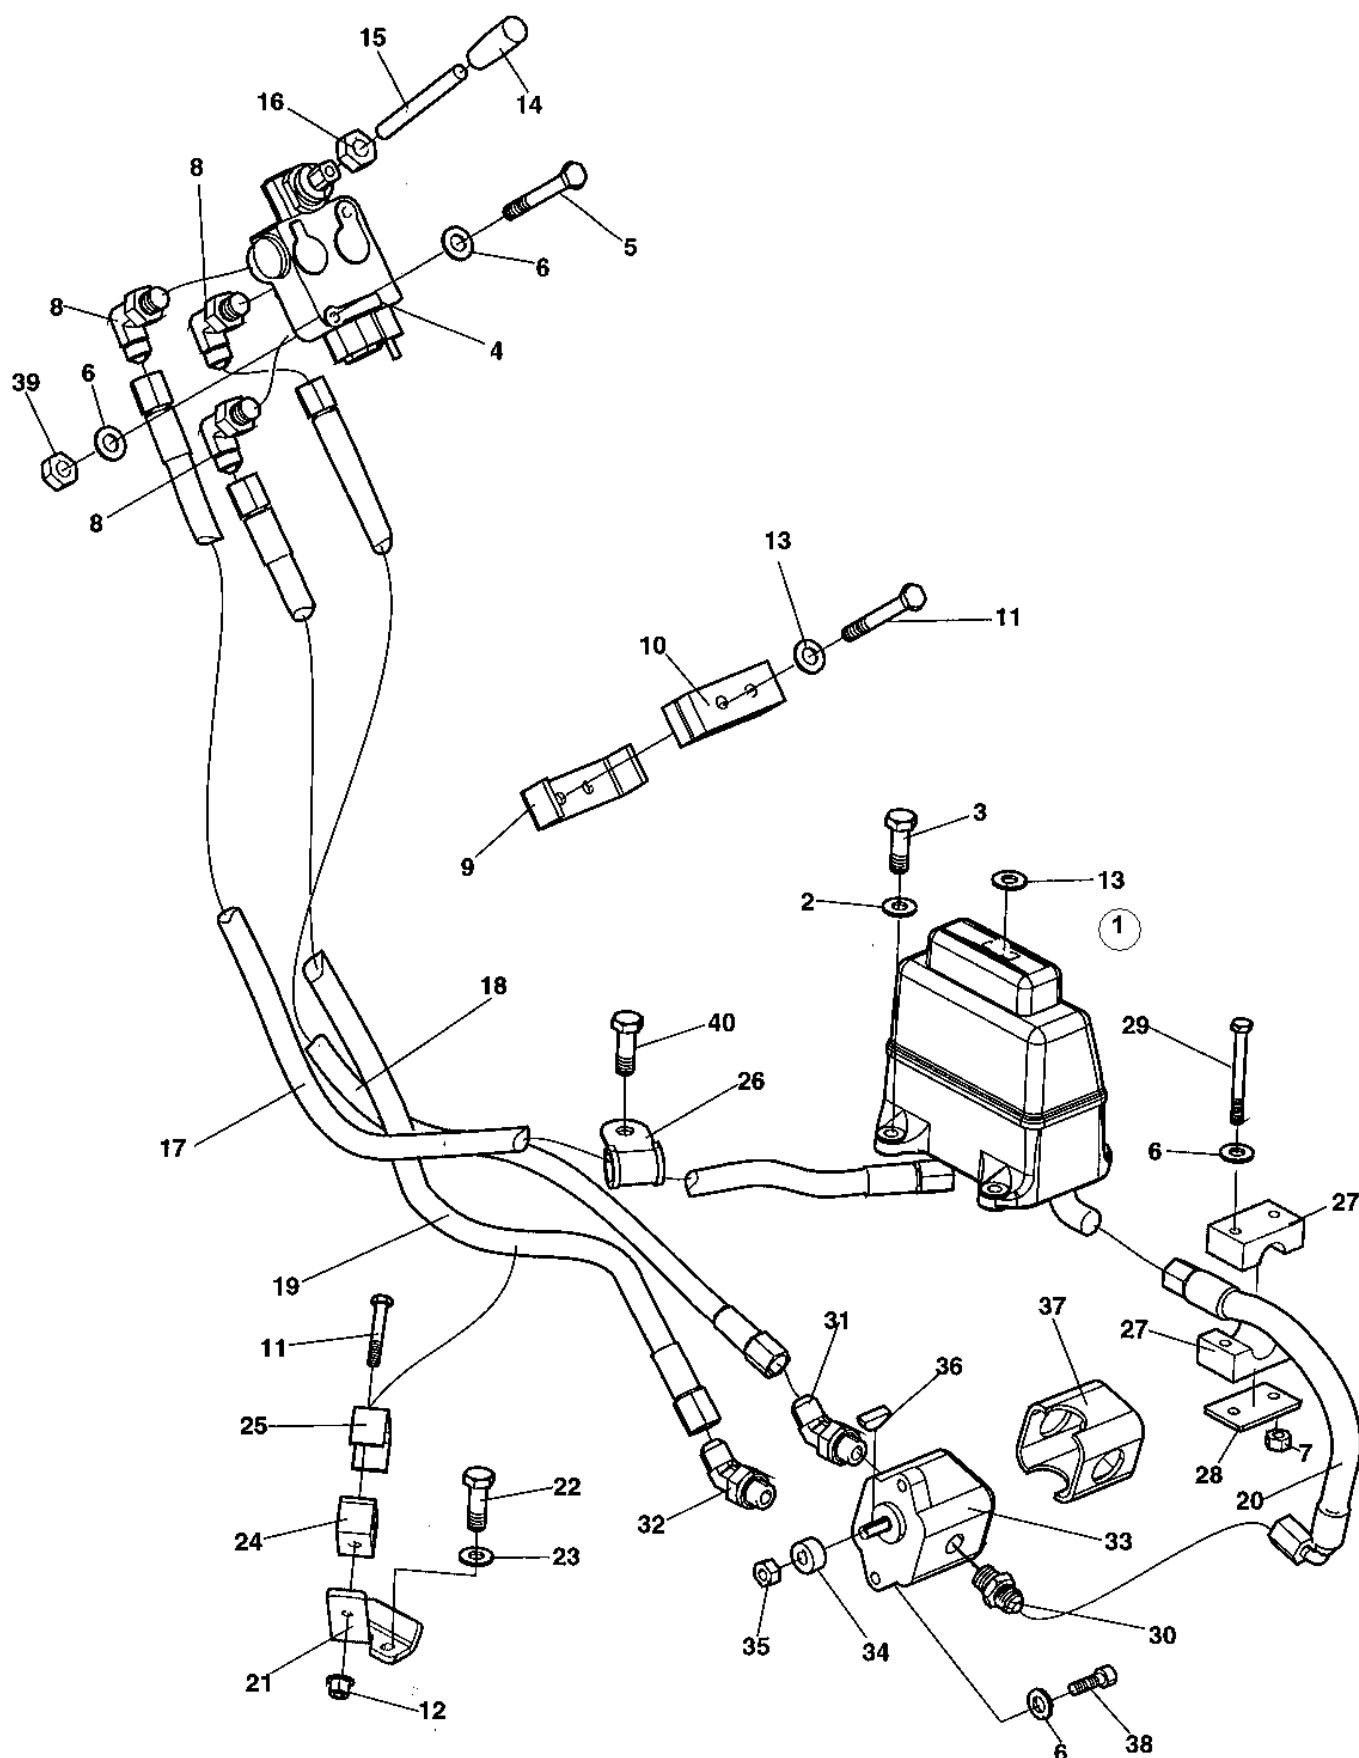

Hydraulic system Up to SN 32003355

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic oil tank (Page 40)	
2	904230		4	Washer	
3	500029		4	Screw	
4	282993		1	Valve	
	937924		1	.Lever housing	
5	500079		2	Screw	M6-1x50 8,8
6	904228		6	Washer	
7	902285		2	Lock nut	
8	234481		3	Connector	
9	100505023		1	Bracket	
10	280534		2	Rubber block	
11	500025		5	Screw	M8-1,25x50 8,8
12	902286		1	Lock nut	
13	904229		5	Washer	
14	903821		1	Grab handle	
15	100505042		1	Rod	
16	570005		2	Nut	
17	483611		1	Hydraulic hose	
18	483612		1	Hydraulic hose	
19	483613		1	Hydraulic hose	
20	482328		1	Hydraulic hose	
21	387511		1	Bracket	
22	500053		1	Screw	
23	904556		1	Washer	
24	280537		1	Rubber block	
25	280538		1	Bracket	
26	921072		1	Clamp	
27	923876		1	Clamp	
28	923859		1	Cover plate	
29	500187		2	Screw	M6x60
30	791145		1	Straight adapter	
31	791591		1	Elbow 45	
32	234992		1	Adapter	
33	383562		1	Hydraulic pump	
34	928894		1	Sleeve	
35	570004		1	Nut	M6
36	928789		1	Key	
37	280540		1	Cover	
38	508025		2	Screw	M6x20
39	586002		2	Lock nut	
40	500022		1	Screw	

A) Are interchangeable to new hydraulic oil tank together with 376674, 376675, 313108 and 313003

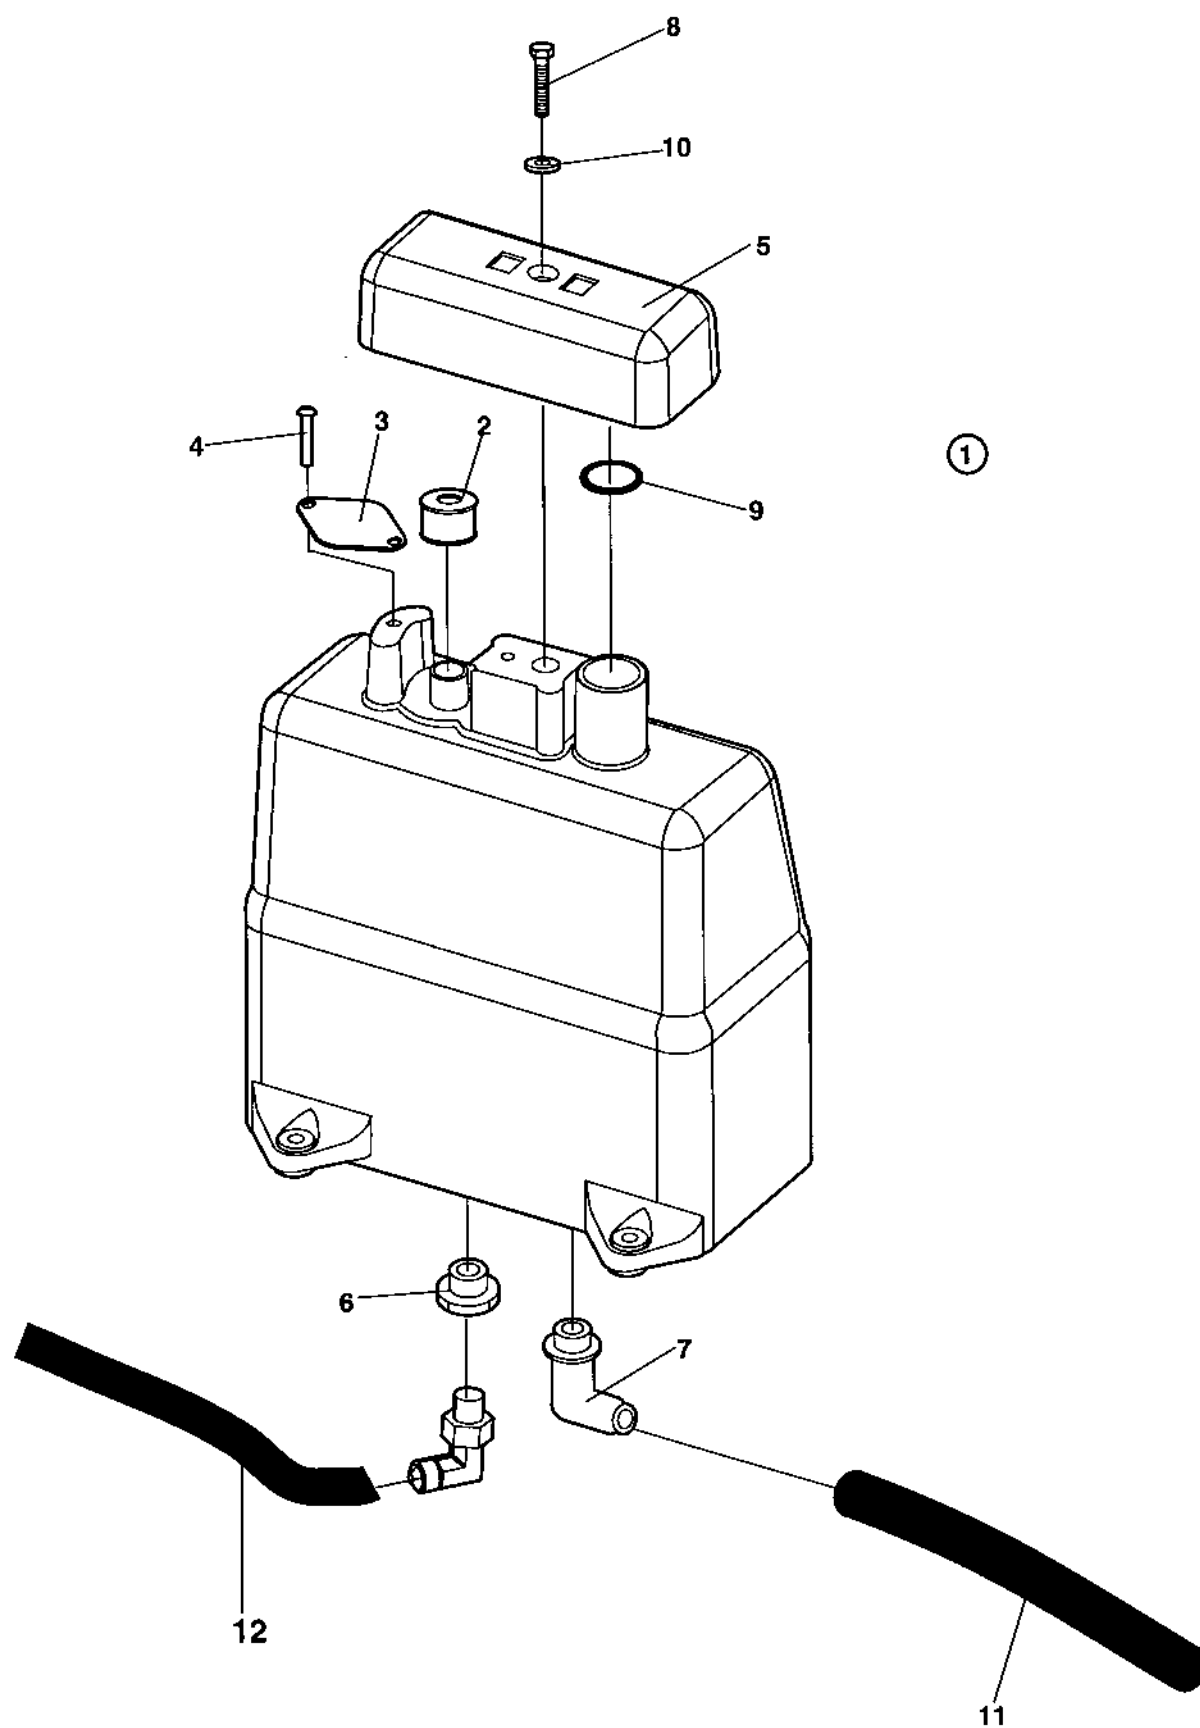


Hydraulic oil tank

Ref. No.	Part No.	Rem.	Qty	Description	Code
	387712		1	Hydraulic oil tank, cpl	
1	387830		1	.Hydraulic oil tank	
2	381566		1	.Air filter	
3	381563		1	.Holder	
4	904960		2	.Screw	
5	381385		1	.Cover	
6	383039		1	.Reducer	
7	334238		1	.Elbow 90 o-ring	
8	500021		1	.Screw	
9	160110		1	.O-ring	
10	234481		1	.Connector	
11		A		Hydraulic hose	
12		A		Hydraulic hose	

A) See section hydraulic system


Hydraulic system From SN 32003356

18099

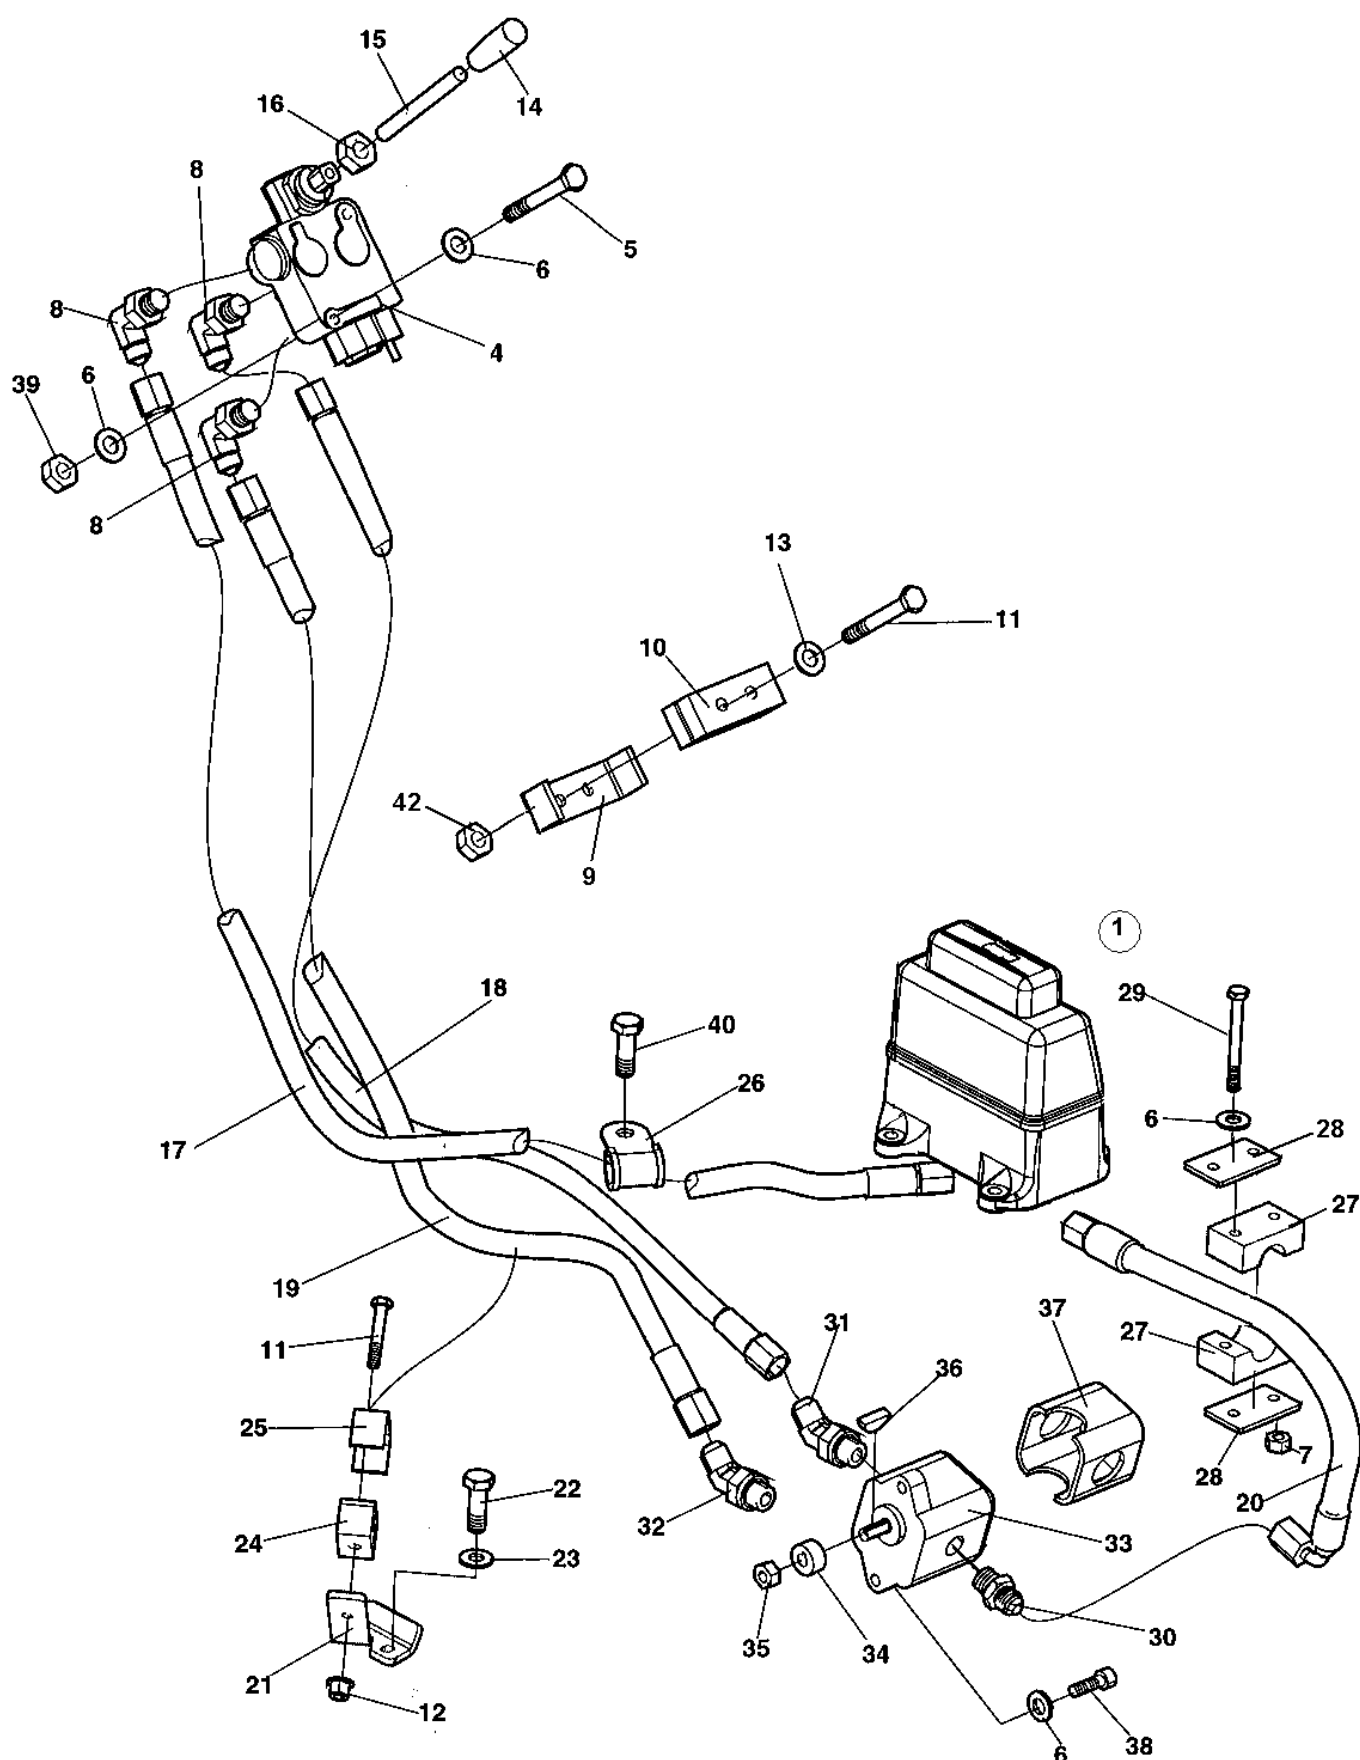

Hydraulic system From SN 32003356

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic oil tank (Page 44)	
2	904230		4	Washer	
3	500029		4	Screw	
4	282993		1	Valve	
	937924		1	.Lever housing	
5	500079		2	Screw	M6-1x50 8,8
6	904228		8	Washer	
7	902285		2	Lock nut	
8	234481		3	Connector	
9	100505023		1	Bracket	
10	280534		2	Rubber block	
11	500025		5	Screw	M8-1,25x50 8,8
12	902286		1	Lock nut	
13	904229		5	Washer	
14	903821		1	Grab handle	
15	100505042		1	Rod	
16	570005		2	Nut	
17	376781		1	Hydraulic hose	
18	483612		1	Hydraulic hose	
19	483613		1	Hydraulic hose	
20	376780		1	Hydraulic hose	
21	387511		1	Bracket	
22	500053		1	Screw	
23	904556		1	Washer	
24	280537		1	Rubber block	
25	280538		1	Bracket	
26	921072		1	Clamp	
27	923876		1	Clamp	
28	923859		2	Cover plate	
29	500089		2	Screw	M6x70
30	791145		1	Straight adapter	
31	791591		1	Elbow 45	
32	234992		1	Adapter	
33	383562		1	Hydraulic pump	
34	928894		1	Sleeve	
35	570004		1	Nut	M6
36	928789		1	Key	
37	280540		1	Cover	
38	508025		2	Screw	M6x20
39	586002		2	Lock nut	
40	500022		1	Screw	
42	586003		2	Lock nut	

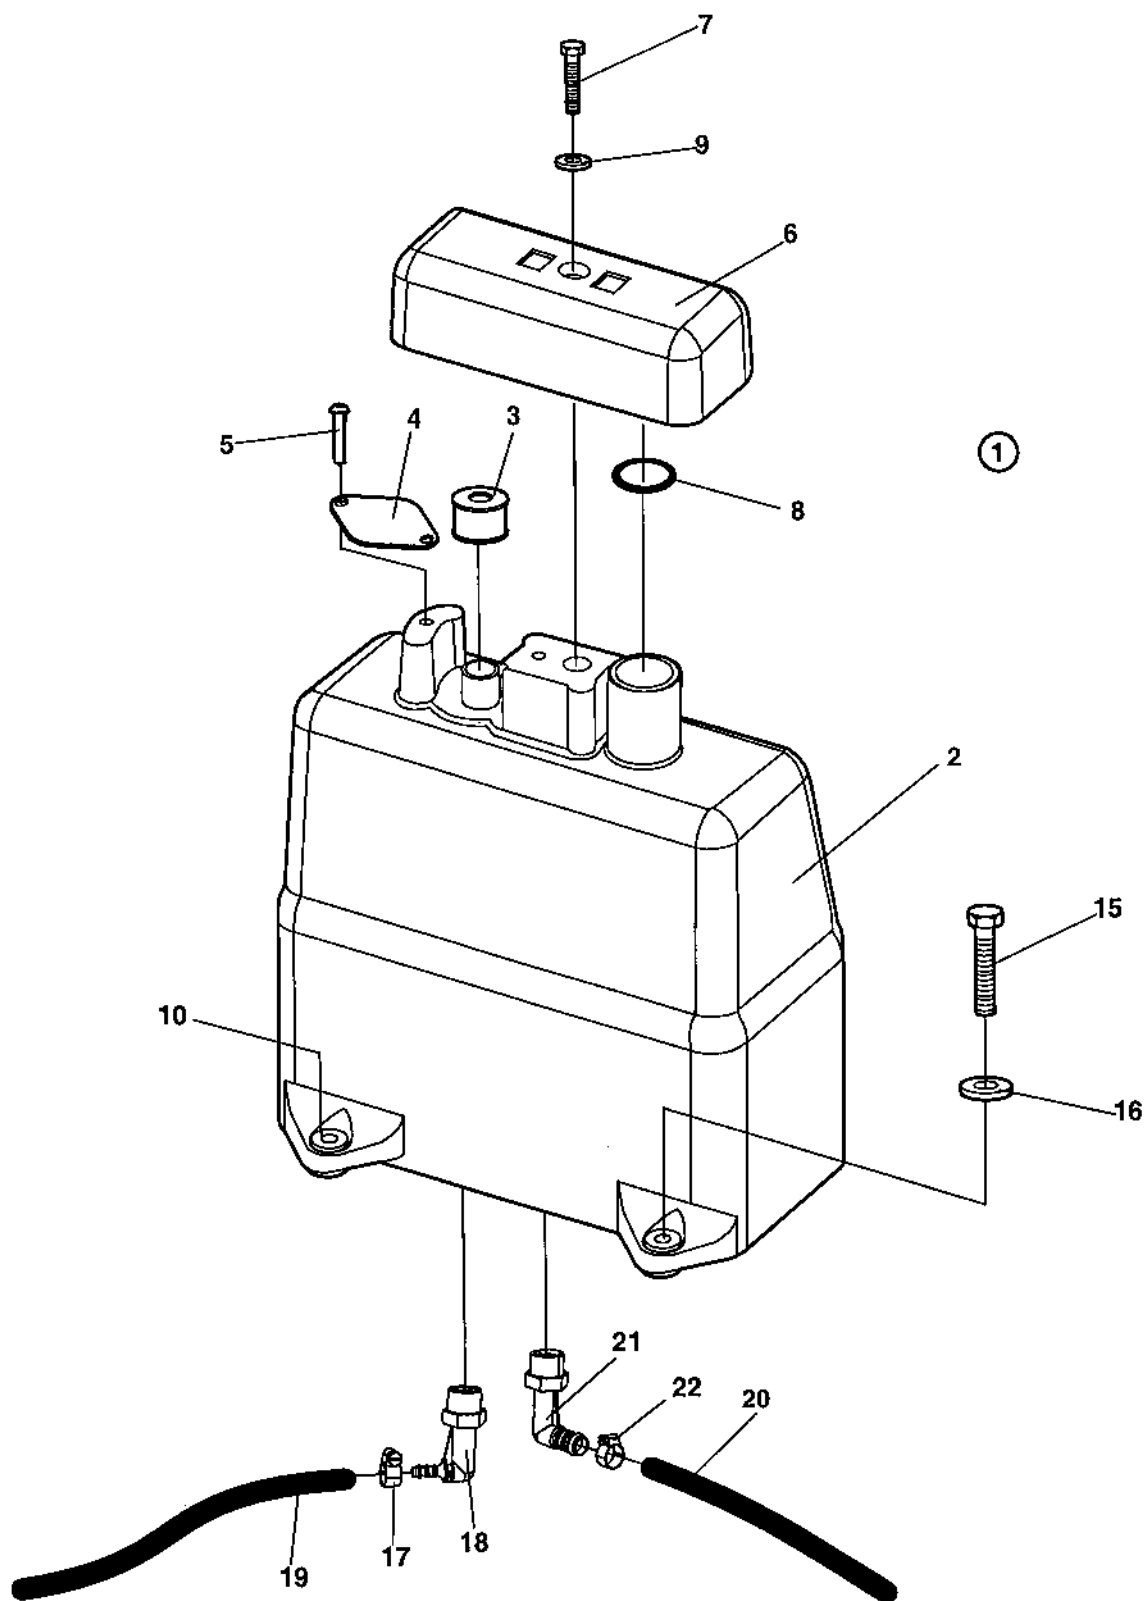

Hydraulic oil tank

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376677		1	Hydraulic oil tank, cpl	
2	387830		1	.Hydraulic oil tank	
3	381566		1	.Air filter	
4	381563		1	.Holder	
5	904960		2	.Screw	
6	381385		1	.Cover	
7	500021		1	.Screw	
8	160110		1	.O-ring	
9	904229		1	.Washer	
10	377333		4	.Bushing	
15	500029		4	Screw	
16	904230		4	Washer	
17	313108		1	Hose clamp	
18	376674		1	Adapter	
19		A	1	Hydraulic hose	
20		A	1	Hydraulic hose	
21	376675		1	Adapter	
22	313003		1	Hose clamp	D


A) See section "hydraulic system"

Electrical equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Electrical equipment (Page 48)	Up to S/N: 32003725
20				Electrical equipment (Page 50)	From S/N: 32003726 to 32005344
25		1		Electrical equipment (Page 52)	From S/N: 32003745 to 32006934
30				Electrical equipment (Page 54)	From S/N: 32006935

Electrical equipment Up to S/N: 32003725

17966

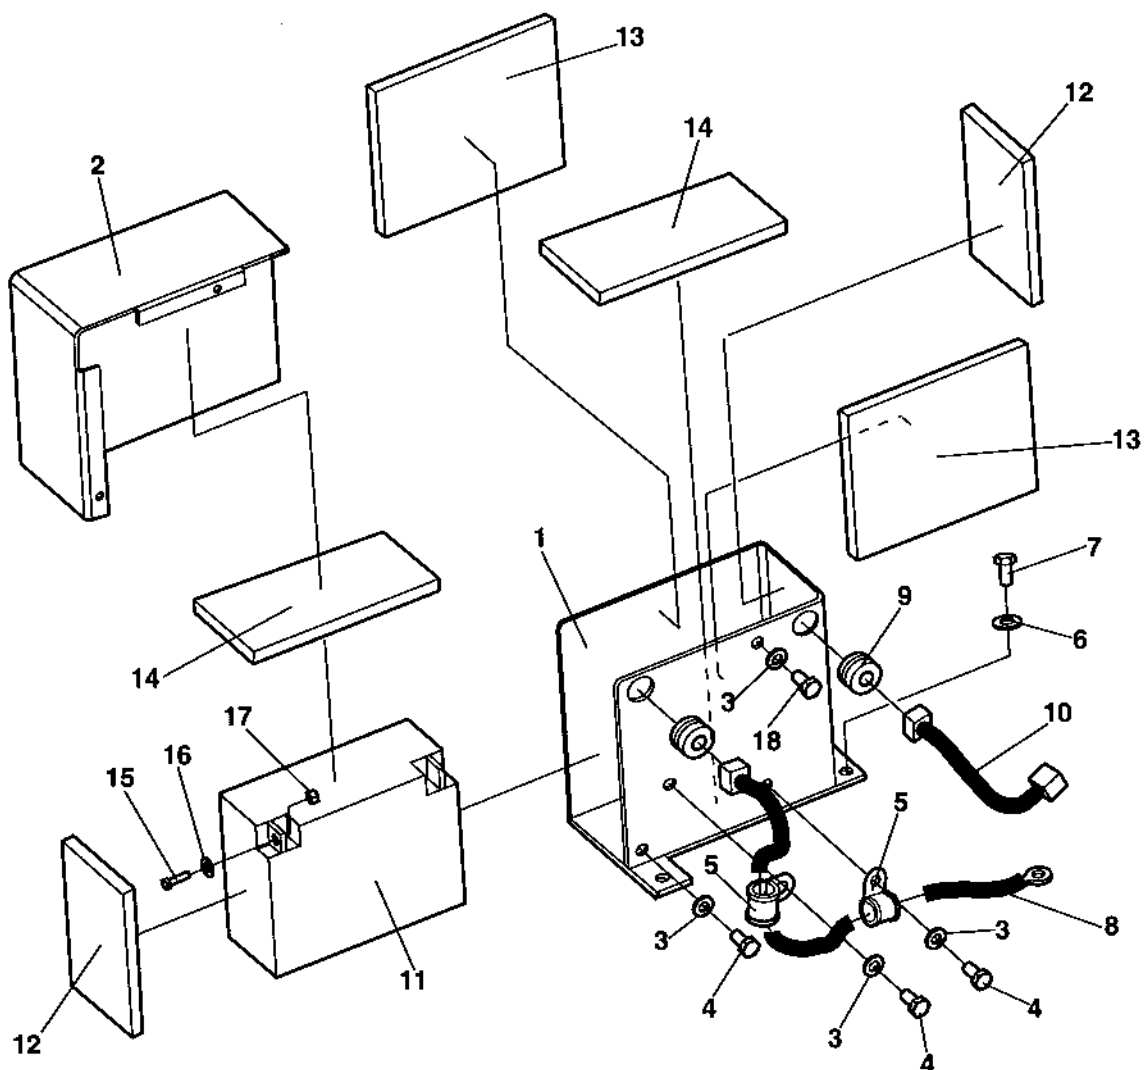


Electrical equipment Up to S/N: 32003725

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387358		1	Battery box	
2	384500		1	Cover	
3	904228		6	Washer	
4	500013		6	Screw	
5	921039		2	Pipe clamp	
6	904229		3	Washer	
7	500019		3	Screw	M8x16 8.8
8	791105		1	Cable	
9	909127		2	Grommet	
10	791174		1	Cable	
11	284201		1	Battery	12V 18Ah
12	384611		2	Insulation	
13	384613		2	Insulation	
14	384612		2	Insulation	
15	500006		2	Screw	M5x16
16	904281		2	Washer	
17	570003		2	Nut	M5
18	500013		1	Screw	

Electrical equipment From S/N: 32003726 to 32005344

18274

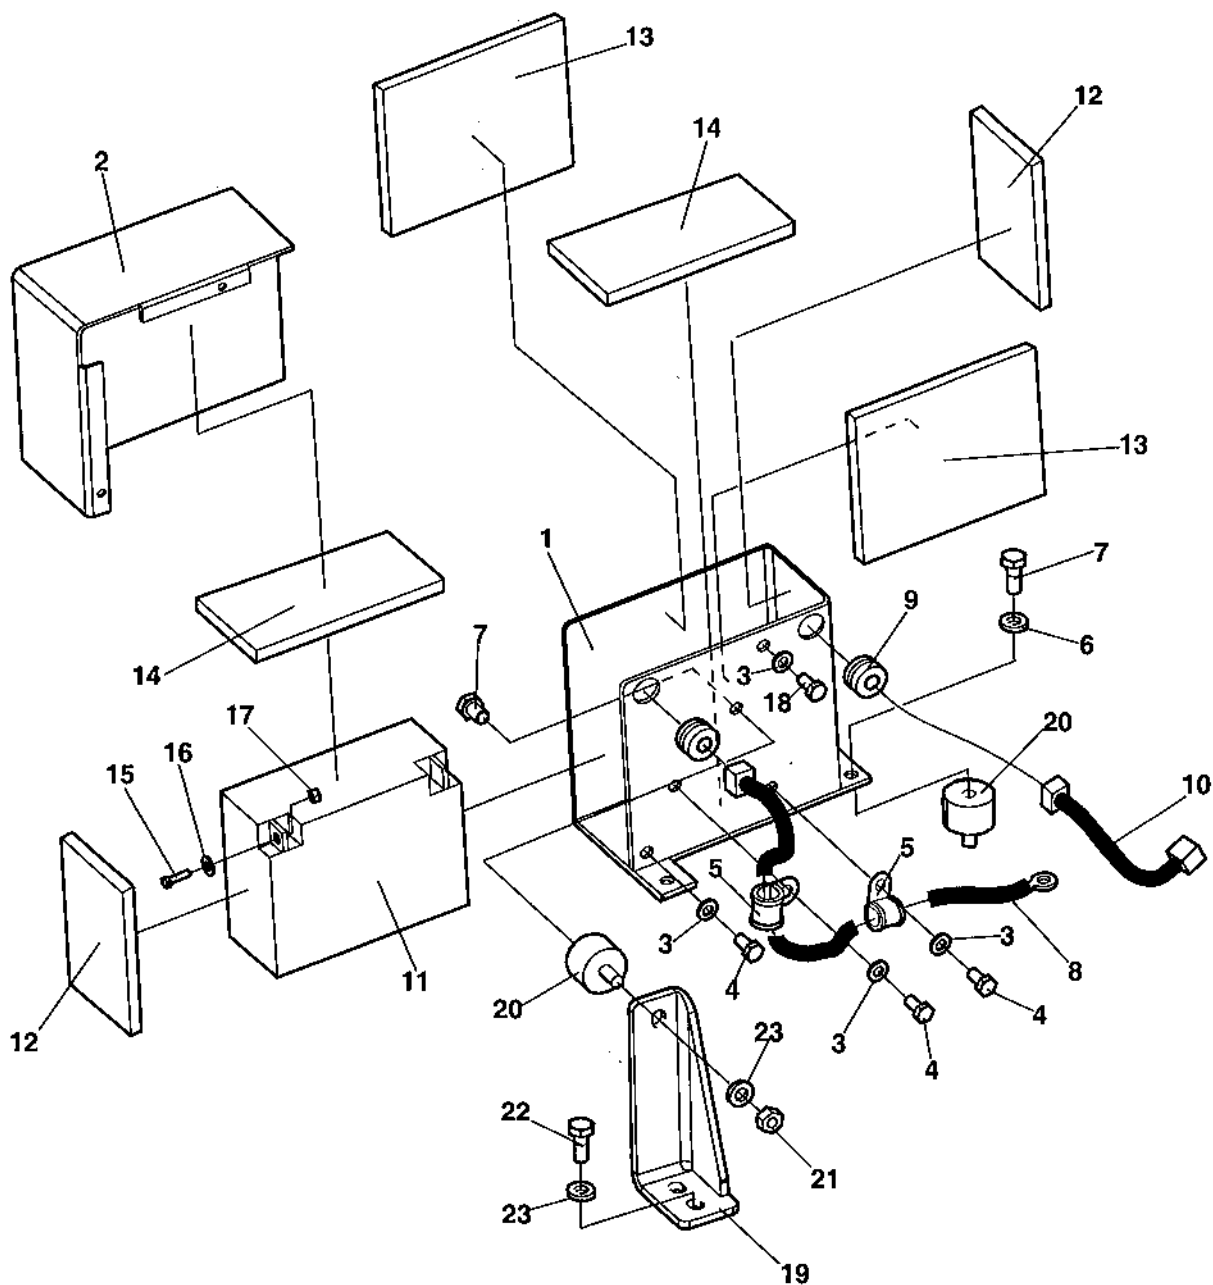

Electrical equipment From S/N: 32003726 to 32005344

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387358		1	Battery box	
2	384500		1	Cover	
3	904228		6	Washer	
4	500013		6	Screw	
5	921039		2	Pipe clamp	
6	904229		3	Washer	
7	500019		3	Screw	M8x16 8.8
8	791105		1	Cable	
9	909127		2	Grommet	
10	791174		1	Cable	
11	284201		1	Battery	12V 18Ah
12	384611		2	Insulation	
13	384613		2	Insulation	
14	384612		2	Insulation	
15	500006		2	Screw	M5x16
16	904281		2	Washer	
17	570003		2	Nut	M5
18	500013		1	Screw	
19	377967		1	Bracket	
20	792114		1	Shock absorbers	
21	570005		1	Nut	
22	500053		2	Screw	
23	904556		3	Washer	




Electrical equipment From S/N: 32003745 to 32006934

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	379870		1	Battery holder	
2	379869		1	Protection	
3	792255		4	Shock absorber	
4	904228		8	Washer	
5	586002		4	Lock nut	
6	500044		4	Screw	M6x8
7	379923		2	Insulation	
8	379922		1	Insulation	
9	384612		3	Insulation	
10	791105		1	Cable	
11	791174		1	Cable	
12	909127		2	Grommet	
13	284201		1	Battery	12V 18Ah
14	379868		1	Cover	
15	500019		4	Screw	M8x16 8.8
16	904229		7	Washer	
17	500053		3	Screw	

Electrical equipment From S/N: 32006935

18795

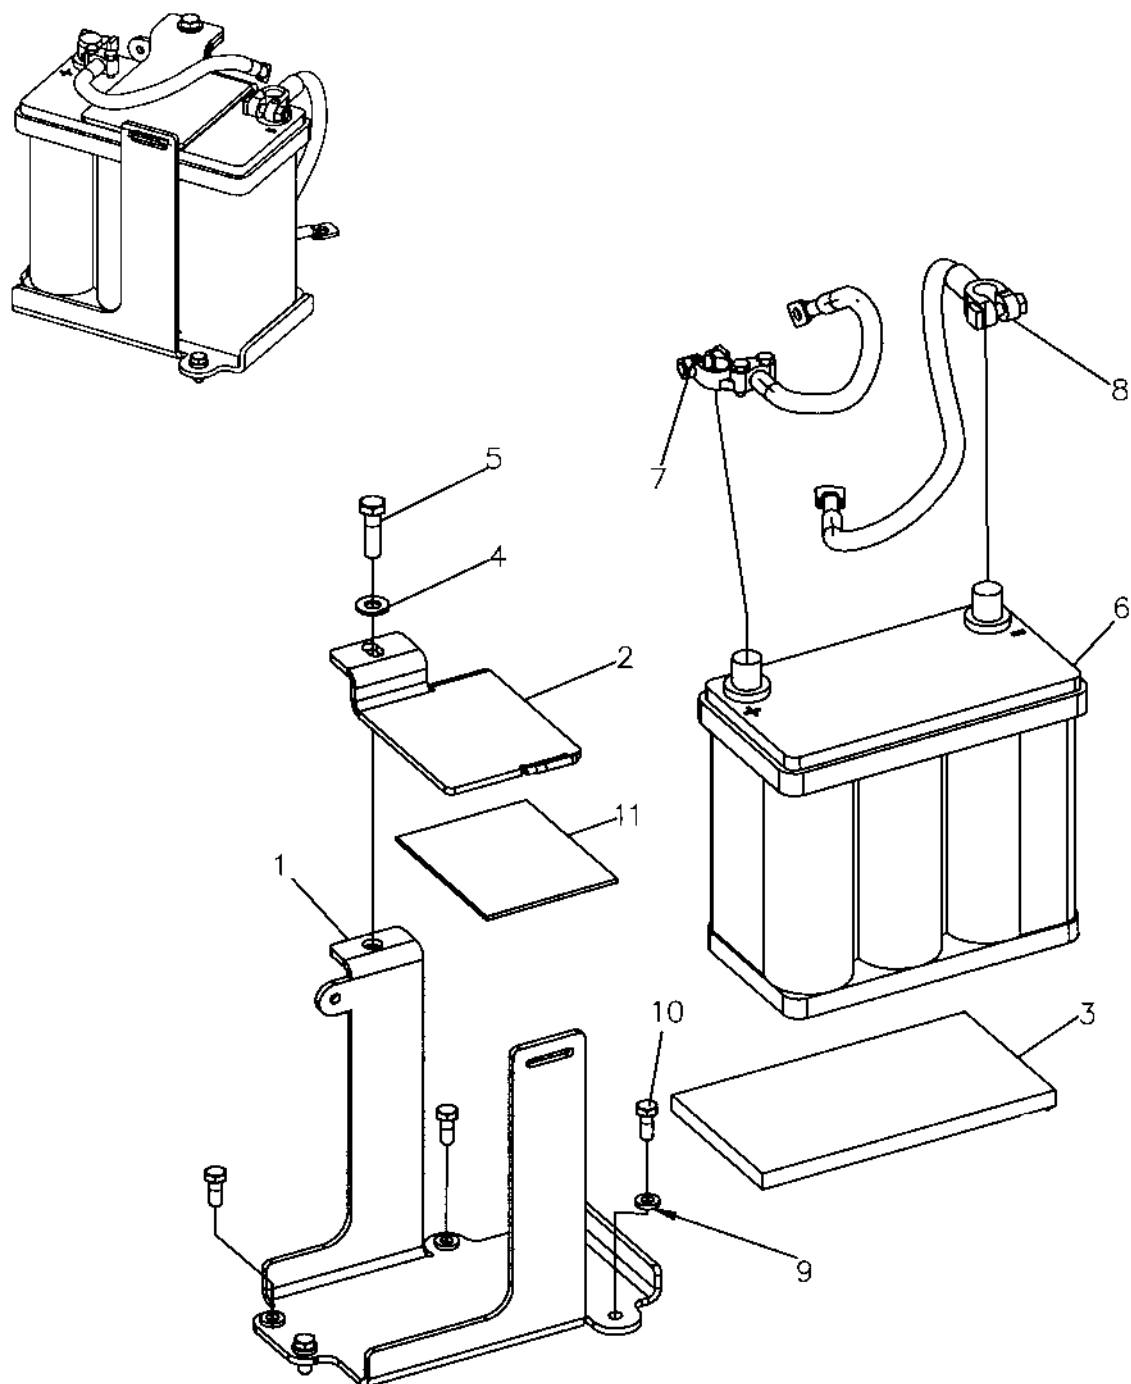

Electrical equipment From S/N: 32006935

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	395879		1	Holder	
2	395878		1	Bracket	
3	395687		1	Insulation	
4	904230		1	Washer	
5	500030		1	Screw	
6	378719		1	Battery	B
7	792234		1	Battery cable	+
8	792717		1	Battery cable	-
9	904556		4	Washer	
10	500053		4	Screw	
11	395998		1	Rubber cloth	

Handle and throttle control

Ref. No.	Part No.	Rem.	Qty	Description	Code
10			1	Handle and throttle control, Honda (Page 58)	
20			1	Handle and throttle control, Hatz (Page 60)	
21			1		




Handle and throttle control, Honda

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	386988-02		1	Handle bracket	
2	389982-02		1	Handle	
3	791373		2	Shock absorber	
4	282901-03		1	Cover, upper	
5	282903-03		1	Cover, lower	
6	904230		14	Washer	
7	500043		10	Screw	
8	100900827		4	Shock absorber	
9	100504729		2	Bushing	
10	500109		2	Screw	M10-1,5x65 8,8
11	385387		1	Shock absorber	
12	382496		1	Hook	
13	500048		1	Screw	M10-1,5x20 8.8
14	570006		1	Nut	
15	904229		10	Washer	
16	500019		10	Screw	M8x16 8.8
18	387987		1	Throttle control	
19	387983		1	.Throttle cable	
20	455019		1	.Throttle handle	
21	284365		1	Bracket	
22	924875	B	3	Screw	
23	902285		3	Lock nut	
24	508001	B	1	Screw	M6x12
	508025	D	1	Screw	M6x20
25	921065		3	Clamp	
26	500040		2	Screw	
27	904228		2	Washer	
28	903903		1	Screw	
29	387958		1	Bracket	
30	500013		1	Screw	
31	904747	A	4	Screw	M5X30
32	902285	C	3	Lock nut	
33	394417		1	Spacer	

- A) New version
 B) Old version
 C) Use together with item 22
 D) New version, use together with item 33

Handle and throttle control, Hatz

17957-1

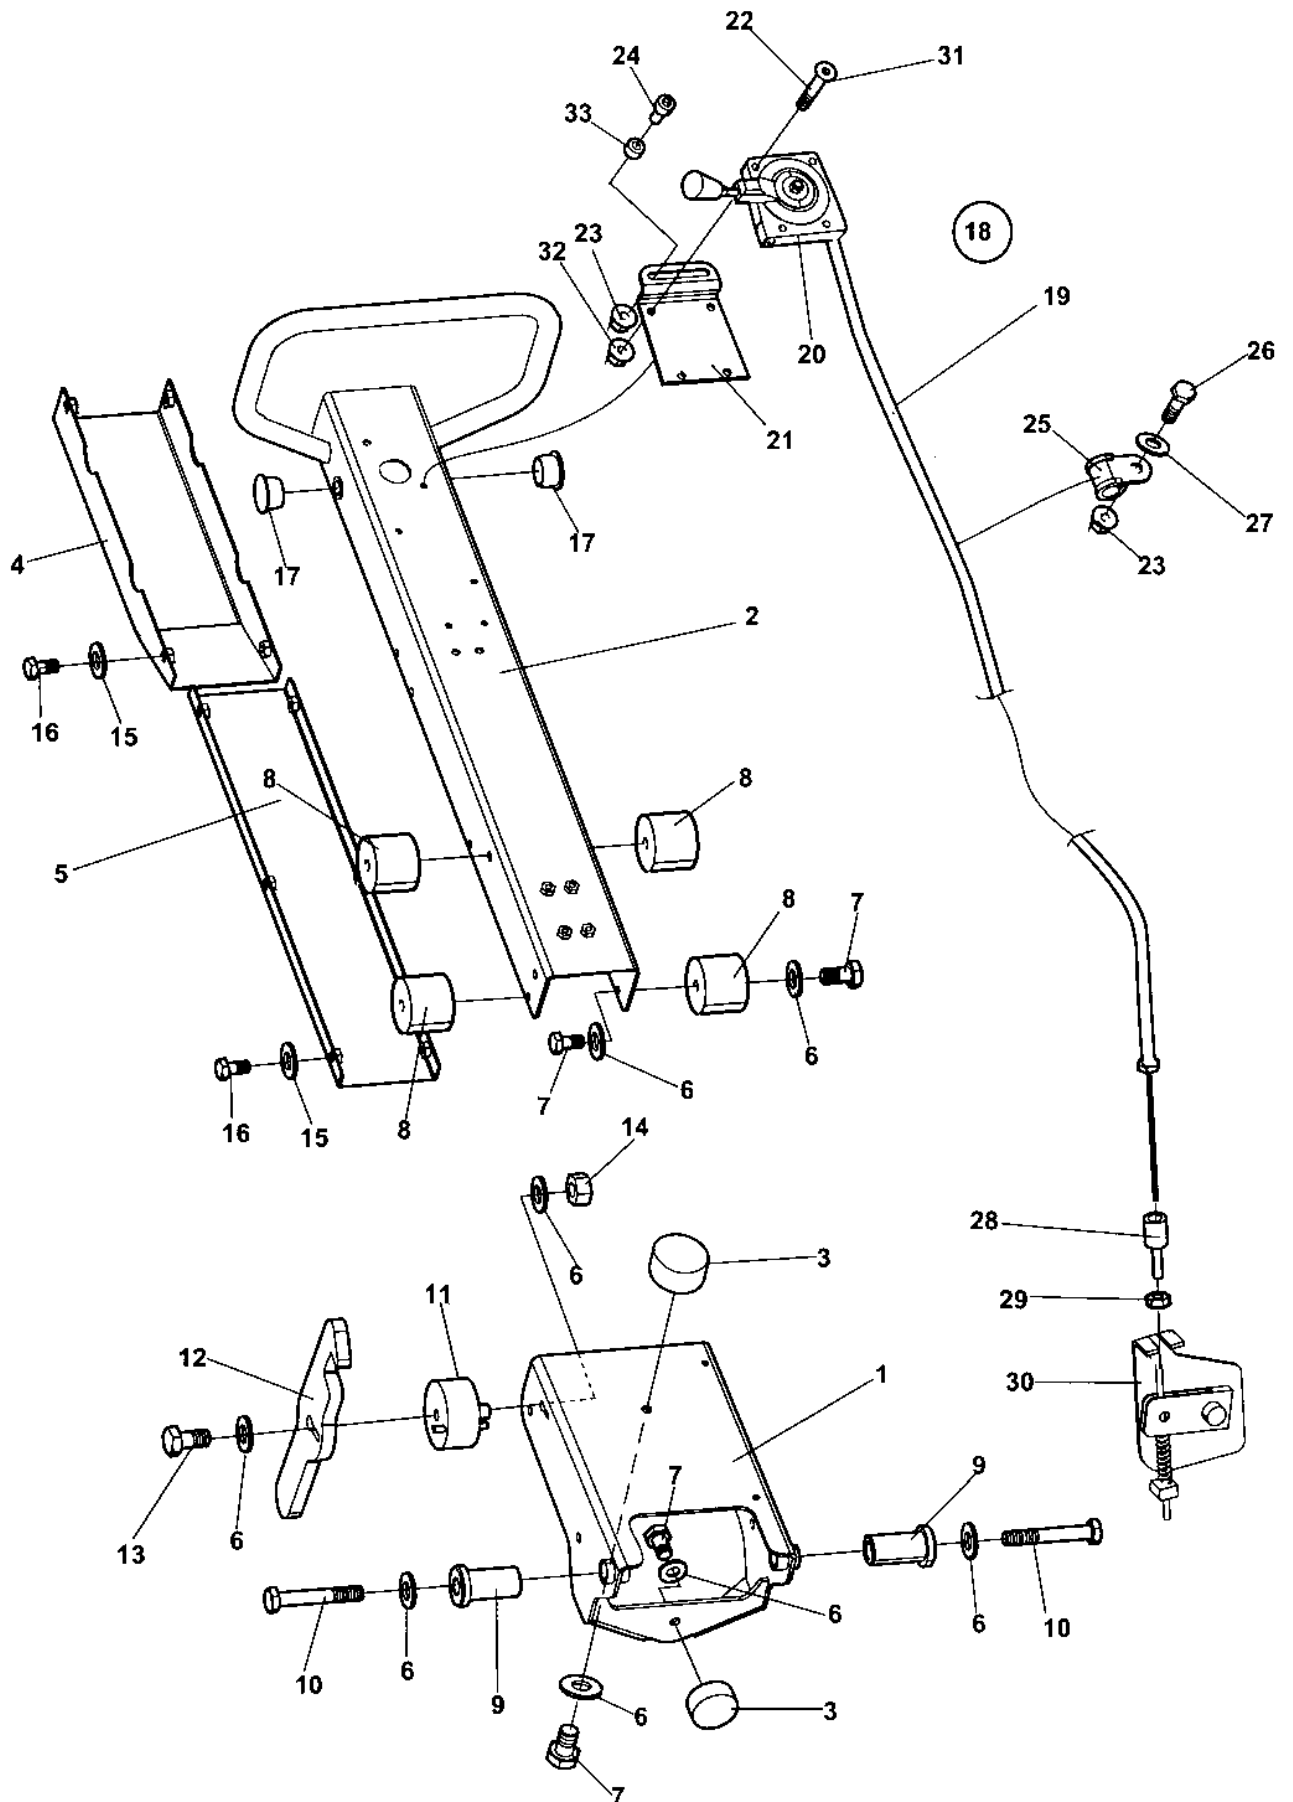

Handle and throttle control, Hatz

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	386988-02		1	Handle bracket	
2	389982-02		1	Handle	
3	791373		2	Shock absorber	
4	282901-03		1	Cover, upper	
5	282903-03		1	Cover, lower	
6	904230		14	Washer	
7	500043		10	Screw	
8	100900827		4	Shock absorber	
9	100504729		2	Bushing	
10	500109		2	Screw	M10-1,5x65 8,8
11	385387		1	Shock absorber	
12	382496		1	Hook	
13	500048		1	Screw	M10-1,5x20 8.8
14	570006		1	Nut	
15	904229		10	Washer	
16	500019		10	Screw	M8x16 8.8
18	380709		1	Throttle control	
19	380710		1	Throttle cable	
20	455019		1	Throttle handle	
21	284365		1	Bracket	
22	924875	C	3	Screw	
23	902285		3	Lock nut	
24	508001	C	1	Screw	M6x12
	508025	E	1	Screw	M6x20
25	921065		3	Clamp	
26	500040		3	Screw	
27	904228		3	Washer	
28	284107		1	Nipple	
29	570004		2	Nut	M6
30		A	1	Speed control	
31	904747	B	1	Screw	M5X30
32	902285	D	3	Lock nut	
33	394417		1	Spacer	


- A) Supplied with engine
- B) New version
- C) Old version
- D) Use together with item 22
- E) New version, use together with item 33

Decals and documentation

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Decals and documentation (Page 64)	
11			1		

Decals and documentation

17959

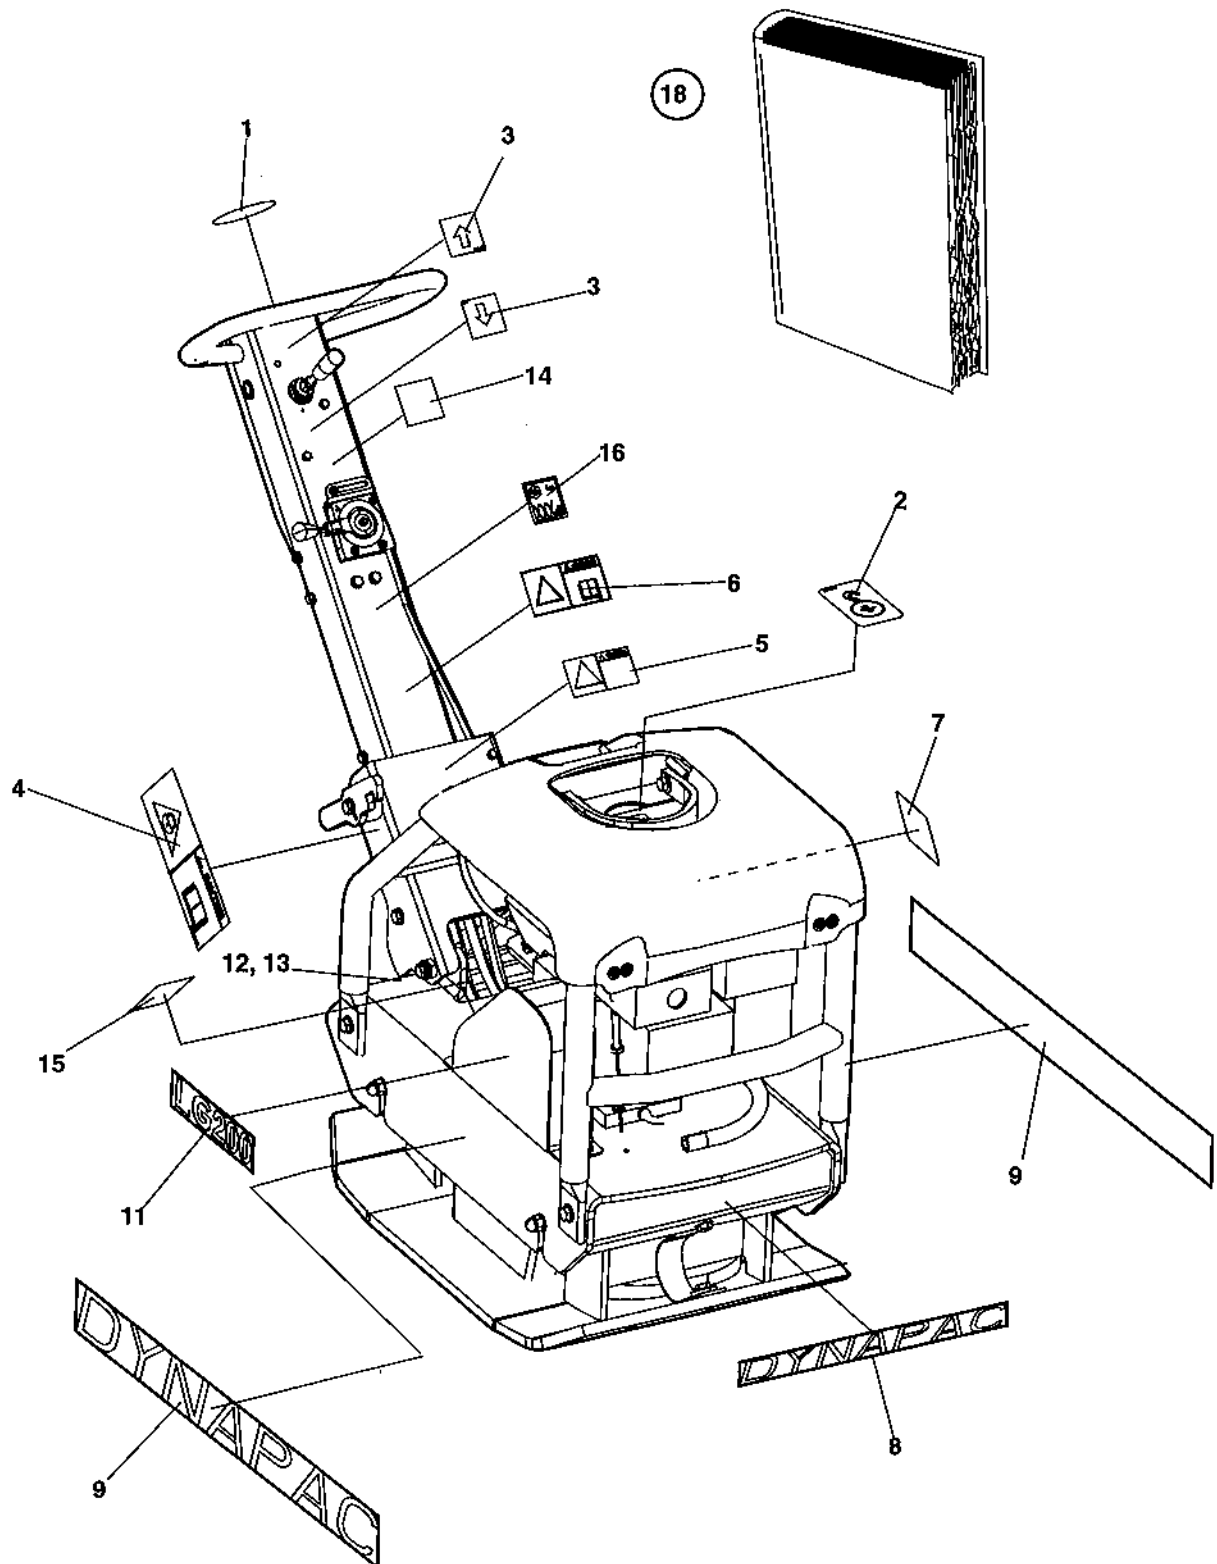

Decals and documentation

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	281898		1	Decal "Ear protection"	
2	281269		1	Decal "LIFT"	
3	284278		2	Decal	
4	908229		1	Safety decal	
5	904785		1	Safety decal	
6	904680		1	Decal "Read instruction manual"	
7	272373		1	Decal "HYDRAULIC OIL"	
8	904097		1	Decal "DYNAPAC"	L=290 mm
9	904096		2	Decal "DYNAPAC"	L=420 mm
11	281749		1	Decal	LG200
12			1	Sign plate	
13	527002		4	Drive screw	
14	284285		1	Decal	
15	903832		1	Safety decal	
16	791293		1	Decal "Sound power level"	105dB
17	903424		1	Decal "HOT SURFACE"	
18			1	Documentation	
			1	Spare parts catalogue	SLG200
			1	Instructions	ILG200
			1	Warranty registration certificate	
			1	Warranty conditions	
			1	CE declaration	
19			1		

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
100504609	25	280417	11	376781	43
100504729	59,61	280534	39,43	377333	45
100504811	25	280537	39,43	377620	35
100505023	39,43	280538	39,43	377967	51
100505036	7	280540	39,43	378719	55
100505042	39,43	280621	7	379868	53
100900827	59,61	280630	15	379869	53
100901018	33	280631	15	379870	53
100901023	33	280637	15	379922	53
100901024	31	280638	15	379923	53
100901382	25	280639	15	380709	61
111114	31,33,35	280640	15	380710	61
111178	33	280642	15	381385	41,45
111180	31	280643	15	381563	41,45
150002	15	280644	15	381566	41,45
150009	31,33,35	280645	15	382496	59,61
150012	31	280646	15	383039	41
150015	33	280647	15	383293	21
150017	15	280648	15	383562	39,43
151007	15	280654	15	383598	9,11
151017	31,33,35	280659	15	384500	49,51
151019	31	280662	15	384611	49,51
151023	33	280663	15	384612	49,51,53
151039	15	280669	15	384613	49,51
160110	41,45	280670	15	385387	59,61
162011	15	280677	15	386986-01	7
232095	27	280750	7	386988-02	59,61
232143	15	280835	31,33,35	387113-03	7
234481	39,41,43	280836	31,33,35	387257	7
234992	39,43	280837	31,33,35	387259	7
238301	19	280850	15	387260	7
238303	19	280858	15	387261	7
238309	19	280871	15	387301-02	25,27
238606	35	281124	31	387358	49,51
239063	19	281234	25	387511	39,43
239064	19	281249	33,35	387577	27
239065	19	281269	65	387705	7
239067	19	281276	15	387712	41
239290	31	281345	31	387830	41,45
239321	19	281749	65	387958	59
239324	19	281887	9	387979	19
239374	19	281893	9	387983	59
239375	19	281898	65	387987	59
239376	19	282734	33	389243	9
239377	19	282901-03	59,61	389982-02	59,61
239378	19	282903-03	59,61	391057	21
239379	19	282993	39,43	391058	21
239380	19	284107	61	394417	59,61
239381	19	284201	49,51,53	394933	11
239391	19	284237-03	7	394985	11
239517	21	284278	65	395687	55
239539	33	284285	65	395878	55
239565	19	284365	59,61	395879	55
239682	19	313001	25	395998	55
239732	33	313003	45	455019	59,61
239734	31,33,35	313108	45	482328	27,39
239768	35	334238	41	483611	39
239857	33	350029	15	483612	39,43
239889	19	376674	45	483613	39,43
239890	19	376675	45	500006	49,51
271032	9,11	376677	45	500013	15,49,51,59
272373	65	376780	43	500019	25,27,49,51,53

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
500019	59,61	903424	65	936985	21
500021	27,31,33,41,45	903821	39,43	936986	21
500022	15,35,39,43	903832	65	936987	21
500025	39,43	903903	59	936988	21
500028	15	903925	27	936989	21
500029	39,43,45	904096	65	936990	21
500030	55	904097	65	936991	21
500037	7	904213	15,31,33,35	936992	21
500040	7,15,59,61	904228	7,15,27,39,43,49	936993	21
500043	59,61		51,53,59,61	936994	21
500044	53	904229	15,25,27,39,43	936995	21
500046	31,33,35		45,49,51,53,59	936996	21
500047	25		61	936997	21
500048	59,61	904230	39,43,45,55,59	936998	21
500049	7		61	936999	21
500051	7,11	904231	7,9,15	937000	21
500053	15,39,43,51,53	904281	25,49,51	937002	21
	55	904556	39,43,51,55	937003	21
500056	9	904640	11,25,27	937004	21
500075	15	904655	7	937005	21
500079	39,43	904680	65	937006	21
500089	43	904734	31,33,35	937007	21
500109	59,61	904742	7	937008	21
500187	39	904747	59,61	937009	21
508001	59,61	904785	65	937010	21
508002	27	904798	7	937011	21
508023	25	904960	41,45	937012	21
508025	39,43,59,61	908229	65	937013	21
508028	7	909127	49,51,53	937014	21
508031	15	912477	33	937015	21
508042	15	921039	49,51	937016	21
527002	65	921044	27	937017	21
535002	31	921065	59,61	937018	21
570003	49,51	921072	39,43	937019	21
570004	39,43,61	923859	39,43	937020	21
570005	11,39,43,51	923876	39,43	937021	21
570006	59,61	924543	7,11	937022	21
570007	7,9	924875	59,61	937023	21
573002	19	928241	15	937024	21
581013	7	928789	39,43	937031	33
586002	39,43,53	928794	15	937035	35
586003	43	928795	15	937036	35
586019	7	928893	15	937415	21
630010	9	928894	39,43	937527	35
630015	11	929286	15	937604	23
747541	7	929287	15	937605	23
791105	49,51,53	929291	15	937606	23
791145	39,43	929356	31	937608	21
791174	49,51,53	929360	31	937924	39,43
791293	65	929454	15	938086	21
791373	59,61	935802	19	938146	21
791524	7	935803	31	938968	23
791591	39,43	935807	31	939588	21
791614	11	935808	31,33	940371	35
792114	51	936976	21	940372	35
792234	55	936977	21	940932	35
792255	53	936978	21		
792717	55	936979	21		
902284	25	936980	21		
902285	7,39,43,59,61	936981	21		
902286	39,43	936982	21		
903363	15	936983	21		